




What's Included

- 1 x DH5 Monitor
- 1 x AC Adapter
- 1 x Camera Shoe Mount
- 1 x Screen Wipe
- 1 x Screen Protection Film
- 1 x Sunhood
- 1 x USB Drive
- 1 x Canon E6 Battery Plate
- 1 x Sony L Series Battery Plate



Getting Started

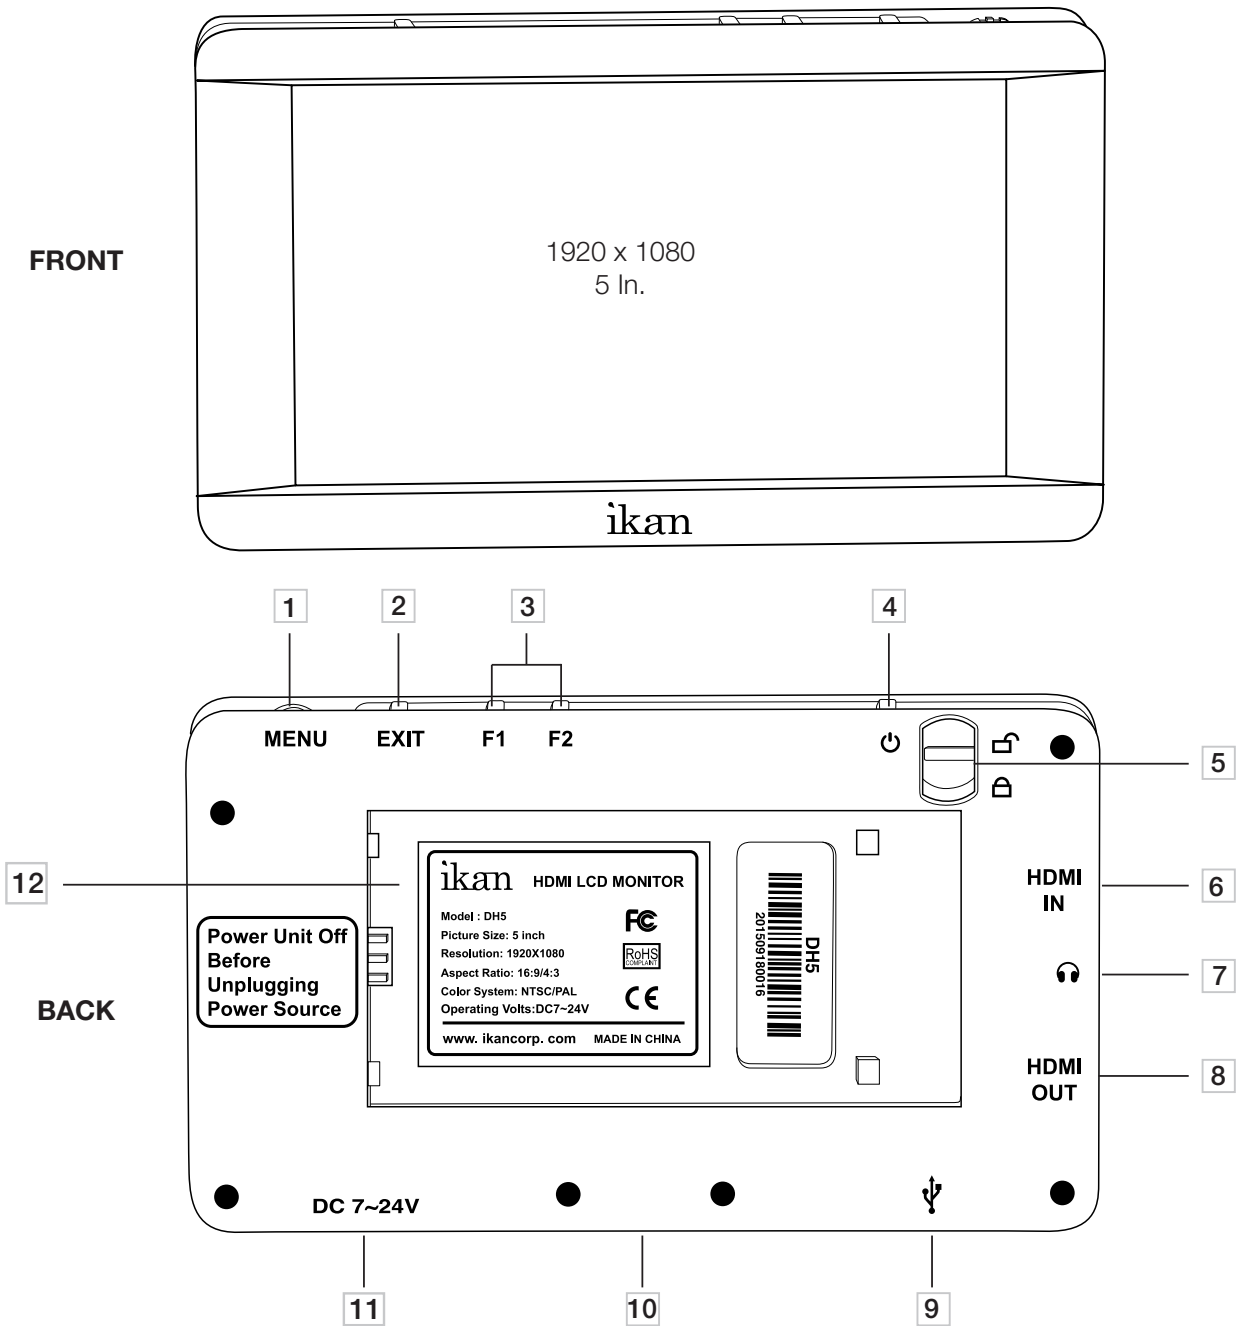

- | | |
|--|--|
| <p>1 Menu Button - Scroll Wheel
Used to enter and navigate the menu.</p> <p>2 Exit / Aspect
Used to exit the menu.</p> <p>3 Function Buttons
Functions can be selected in the menu</p> <p>4 Power Button
Power ON/OFF</p> <p>5 Battery Plate Lock
Locks Battery Plate</p> <p>6 HDMI Input Terminal</p> | <p>7 3.5mm Headphone Output</p> <p>8 HDMI Output Terminal</p> <p>9 USB Connector
Used for Software Updates</p> <p>10 1/4"-20 Threaded Insert</p> <p>11 DC 7-24V Power Terminal
Standard DC Connection</p> <p>12 DV Battery Plate Slot
Used for mounting DV Battery plate</p> |
|--|--|

Configuration of Setting Menus

- Guides** ————— Toggle between the following: 80%, 90%, 15:9, 4:3, 1.5:1, 2:1, 2.35:1
- Crosshair** ————— Activates Crosshair on center of screen.
- Grids** ————— Activates grid on the screen to assist with framing.
- Video Config** ————— Brightness: 0-100
Contrast: 0-100
Chroma: 0-100
Sharpness: 0-100
Tint: 0-100
- Color Temp** ————— 5600K, 6500K, 9300K, Manual
- Backlight** ————— Allows user to fine tune the intensity of the LCD Panel's backlight.
- Aspect** ————— Allows user to change the aspect ratio of the image.
- System Config** ————— OSD - Language: Choose between English & Chinese for OSD.
OSD - Duration: Choose how long the menu stays active without activity.
OSD - Transparency: Choose from low, medium, high, or off.
MENU Setup - Allows 5 users to save menu settings.
System Reset - Reset Settings to factory defaults.
- Power Mode** ————— Power ON - Monitor powers on automatically when power is applied.
Power OFF - Power button needs to be pressed in order to turn on the monitor.
Keep Last - Keep last settings
Low Battery Alarm - Warns the user when battery is low.

Function Set Up 1-8

Guides

Crosshair

Peaking

Underscan

DSLR

Scaling

Zooming

Check Field

HV Delay

Grids

False Color

Audio Wave

Clip Guides

Histogram

5DII Rec.

Firmware Version

Information

Update (USB)

Displays a crosshair on the center of the screen.

The DH5 is equipped with Monochrome Peaking features, which highlight the desired focus area in a bright, red outline. The operator adjusts the focus control until the red indicator outlines on the desired area are razor sharp, indicating optimal focus. For best results, be sure object is properly exposed.

The DSLR Scaling function will allow users to extend their DSLR camera's HDMI Video Output any option of four; Normal 3:2, 16:9, or Full Screen. Convenience Made simple.

Toggles between the Blue only, Red only, Green only, & Mono Modes. This is to help calibrate the image.

This function displays the blanking portion of the incoming signal.

Activates grid on screen to assist with framing.

This feature utilizes a full spectrum of assigned color indicators, ensuring flawless shot exposure. Under/Over luminance warnings enable the user to get the desired quality every time.

Displays Audio Stereo Levels.

The DH5 offers adjustable upper Clip Guide levels to accurately display overexposed images in any shooting condition. The operator simply assigns the upper IRE to their preference and any exposure over the set IRE limit will flash in a vivid purple, indicating only the over exposed area.

A graphical representation of the pixels exposed in your image. The left side of the graph represents the blacks or shadows, the right side represents the highlights or bright areas and the middle section is mid-tones. How high the peaks reach represent the number of pixels in that particular tone. This tool helps you get proper exposure.

Displays currently installed firmware.

Used to update firmware when a USB containing update file is inserted.

NOTE:

To see further options for an active function, hold the function key for 2 seconds until option mode appears.

Specifications

Aspect Ratio	16 x 9
Backlight	LED
Brightness	450 cd/m2
Build Material	Heavy Duty Plastic
Color Depth	16.7 Millions
Color System	PAL/NTSC/SECAM (Auto-
Contrast Ratio	Detected)
Dimensions	5.5 x 3.2 x 0.7 In.
Input Voltage	DC 7V - 24V
Inputs	HDMI
Operating Temperature	0°C~50° (32°F~122°F)

Outputs	HDMI
Pixel Pitch	0.01925x0.05775 mm
Power Consumption	6W
Resolution	1920x1080
Response Time	20ms
Screen Size	5 In.
Shipping Dimensions	3 x 14.75 x 7.75 In.
Shipping Weight	2 lbs
Viewing Angle	160° Horizontal / 160° Vertical
Weight	0.2 lbs

Supported Video Signals

HDMI	720x480i & 720x480p @ 59.94, 60 Hz
	720x576i & 720x576p @ 50 Hz
	1280x720p @ 50, 59.94, 60 Hz
	1920x1080i @ 50, 59.94, 60 Hz
	1920x1080psf @ 24, 25, 29.94, 30, 50, 59.94, 60 Hz
	1920x1080p @ 23.97, 24, 25, 29.94, 30, 50, 59.94, 60 Hz

Optional Accessories

MOUNTS

- MA207 7 In. Articulating Arm
- MA211 11 In. Articulating Arm
- MA211-R 11 In. Articulating Arm w/ Single Rod Mount

BATTERY PLATES

- BP5-C Canon 900 Battery Plate
- BP5-E6 Canon LP-E6+ Battery Plate
- BP5-P Panasonic D54 Battery
- BP5-S Sony L Series Battery Plate
- BP5-N Nikon EN-EL15 Battery Plate
- BP5-PG6 Panasonic G6 Battery Plate
- BP5-SU Sony BP-U Series Battery Plate

Learn More

More dynamic information at official website: www.ikancorp.com

Support

Contact email: support@ikancorp.com

CONDITIONS OF WARRANTY SERVICE

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period is expired.

Free Service will not be Provided in the Following Situations:(*Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors, etc.