

7" 4K 1920 x 1200 HDMI Monitor w/ Canon LP-E6 & Sony L



What's Included

- 1 x DH7 Monitor
- 1 x AC Adapter
- 1 x Camera Shoe Mount
- 1 x Screen Wipe
- 1 x Screen Protection Film
- 1 x Sunhood
- 1 x Canon E6 Battery Plate
- 1 x Sony L Series Battery Plate

ikan

 
 
www.ikancorp.com

support@ikancorp.com

713.272.8822

© 2015 ikan Corporation. All rights Reserved

Getting Started

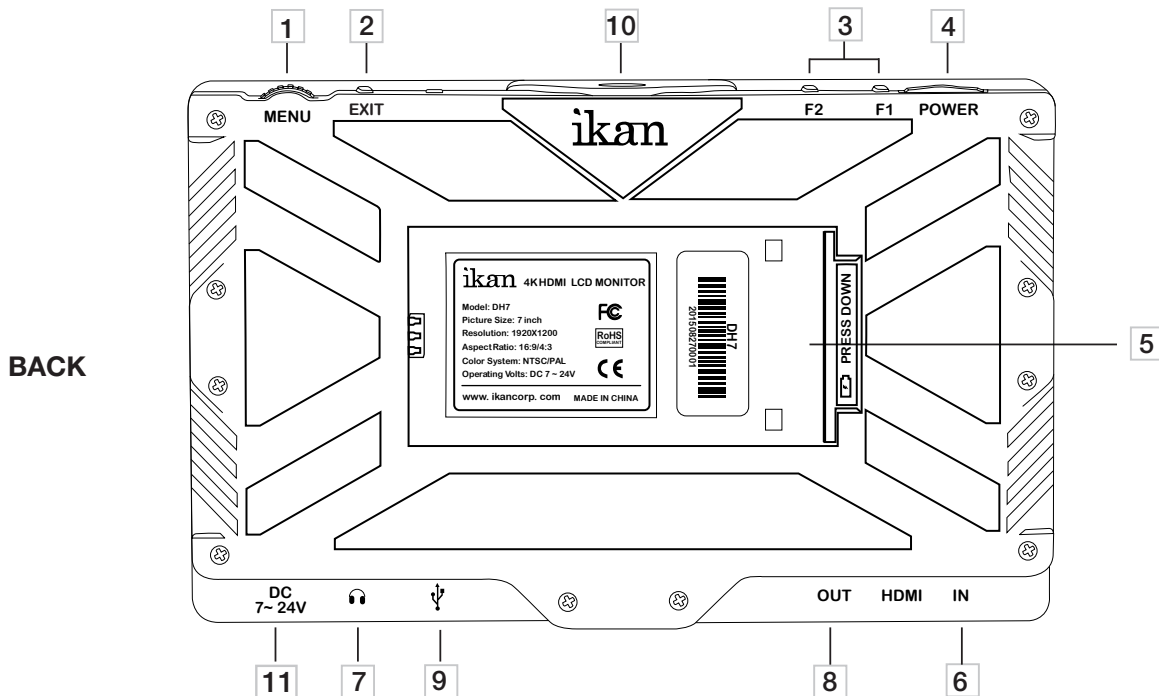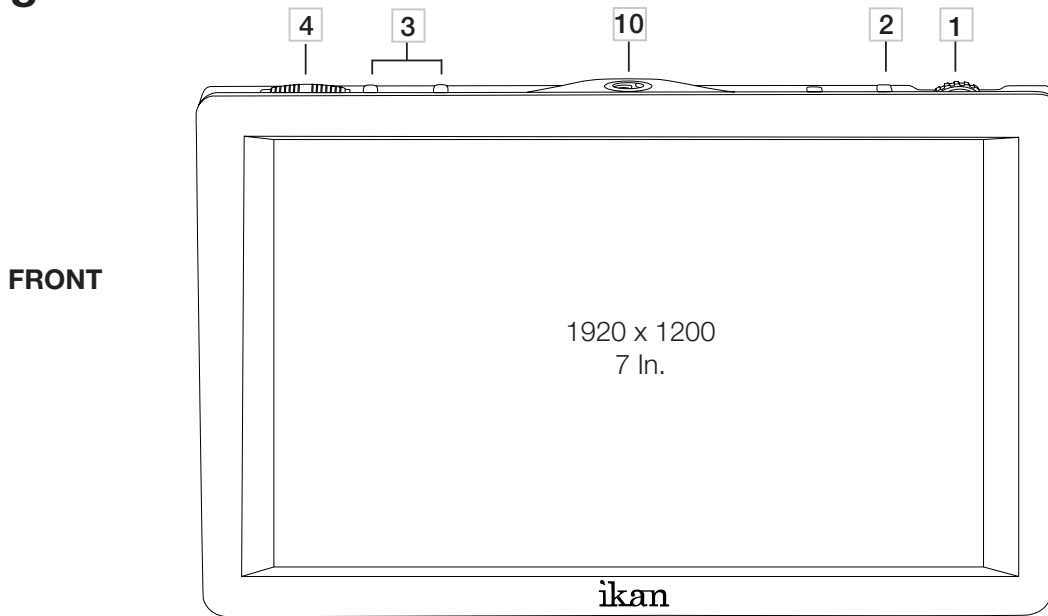

- | | |
|--|--|
| <p>1 Menu Button - Scroll Wheel
Used to enter and navigate the menu.</p> <p>2 Exit / Aspect
Used to exit the menu.</p> <p>3 Function Buttons
Functions can be selected in the menu</p> <p>4 Power Button
Power ON/OFF</p> <p>5 Battery Plate Release
Releases Battery Plate</p> <p>6 HDMI Input Terminal</p> | <p>7 3.5mm Headphone Output</p> <p>8 HDMI Output Terminal</p> <p>9 USB Connector
Used for Software Updates</p> <p>10 1/4"-20 Threaded Insert</p> <p>11 DC 7-24V Power Terminal
Standard DC Connection</p> <p>12 DV Battery Plate Slot
Used for mounting DV Battery plate</p> |
|--|--|

 
Battery Plate Installation & Removal

Installation

To Install Battery Plate by pressing down on the battery plate, and pushing it left until you hear it click into place.

①. Position plate against “Press Down” Button


②. Press down on Battery plate

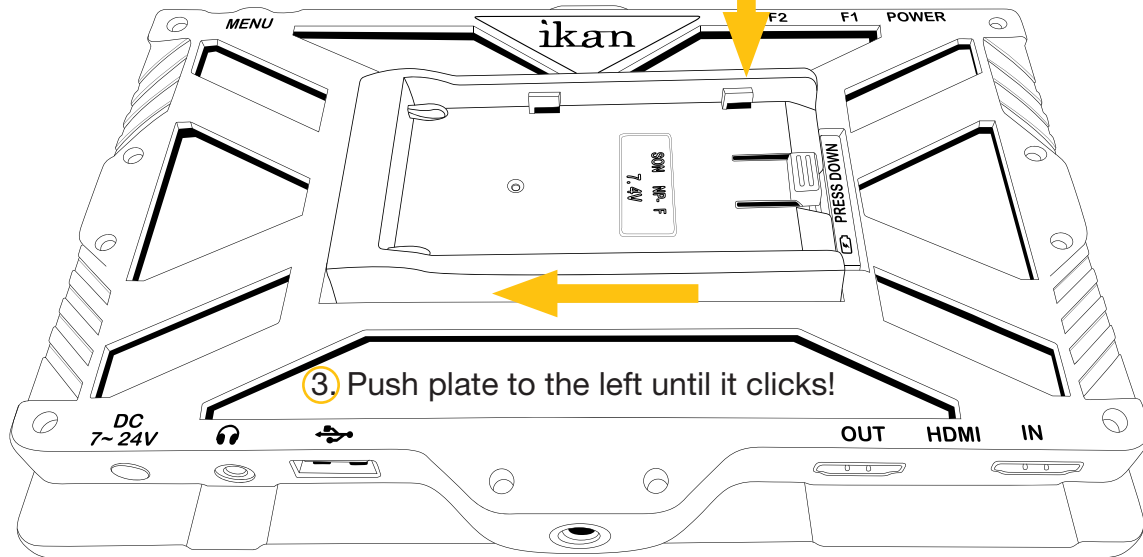

Removal

To Remove your battery plate, simply press down on the Release Button, then push the Battery Plate to the right until the plate releases.

 
①. Press down on Release Button

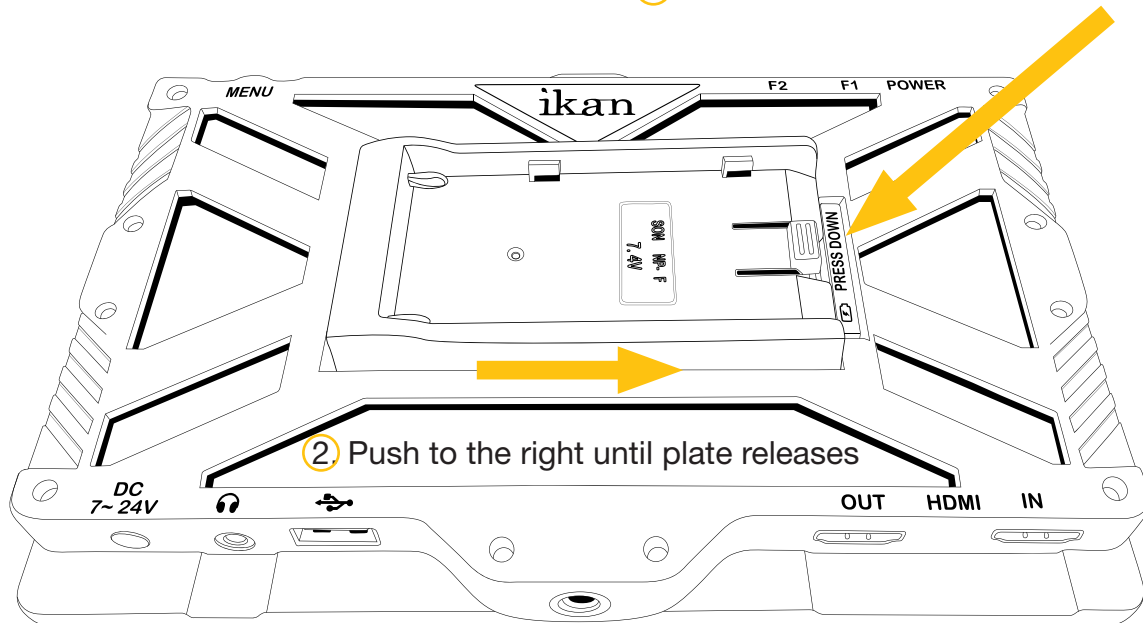

Configuration of Setting Menus

- Guides** _____ Toggle between the following: 80%, 90%, 15:9, 4:3, 1.5:1, 2:1, 2.35:1
- Crosshair** _____ Activates Crosshair on center of screen.
- Grids** _____ Activates grid on the screen to assist with framing.
- Video Config** _____ Brightness: 0-100
 Contrast: 0-100
 Chroma: 0-100
 Sharpness: 0-100
 Tint: 0-100
- Color Temp** _____ 5600K, 6500K, 9300K, Manual
- Backlight** _____ Allows user to fine tune the intensity of the LCD Panel's backlight.
- Aspect** _____ Allows user to change the aspect ratio of the image.
- System Config** _____ OSD - **Language:** Choose between English & Chinese for OSD.
 OSD - **Duration:** Choose how long the menu stays active without activity.
 OSD - **Transparency:** Choose from low, medium, high, or off.
 MENU Setup - Allows 5 users to save menu settings.
 System Reset - Reset Settings to factory defaults.
- Flip Control** _____ Flip Image and/or Menu
 Low Battery Alarm - Warns the user when battery is low.

 Function Set Up 1-8

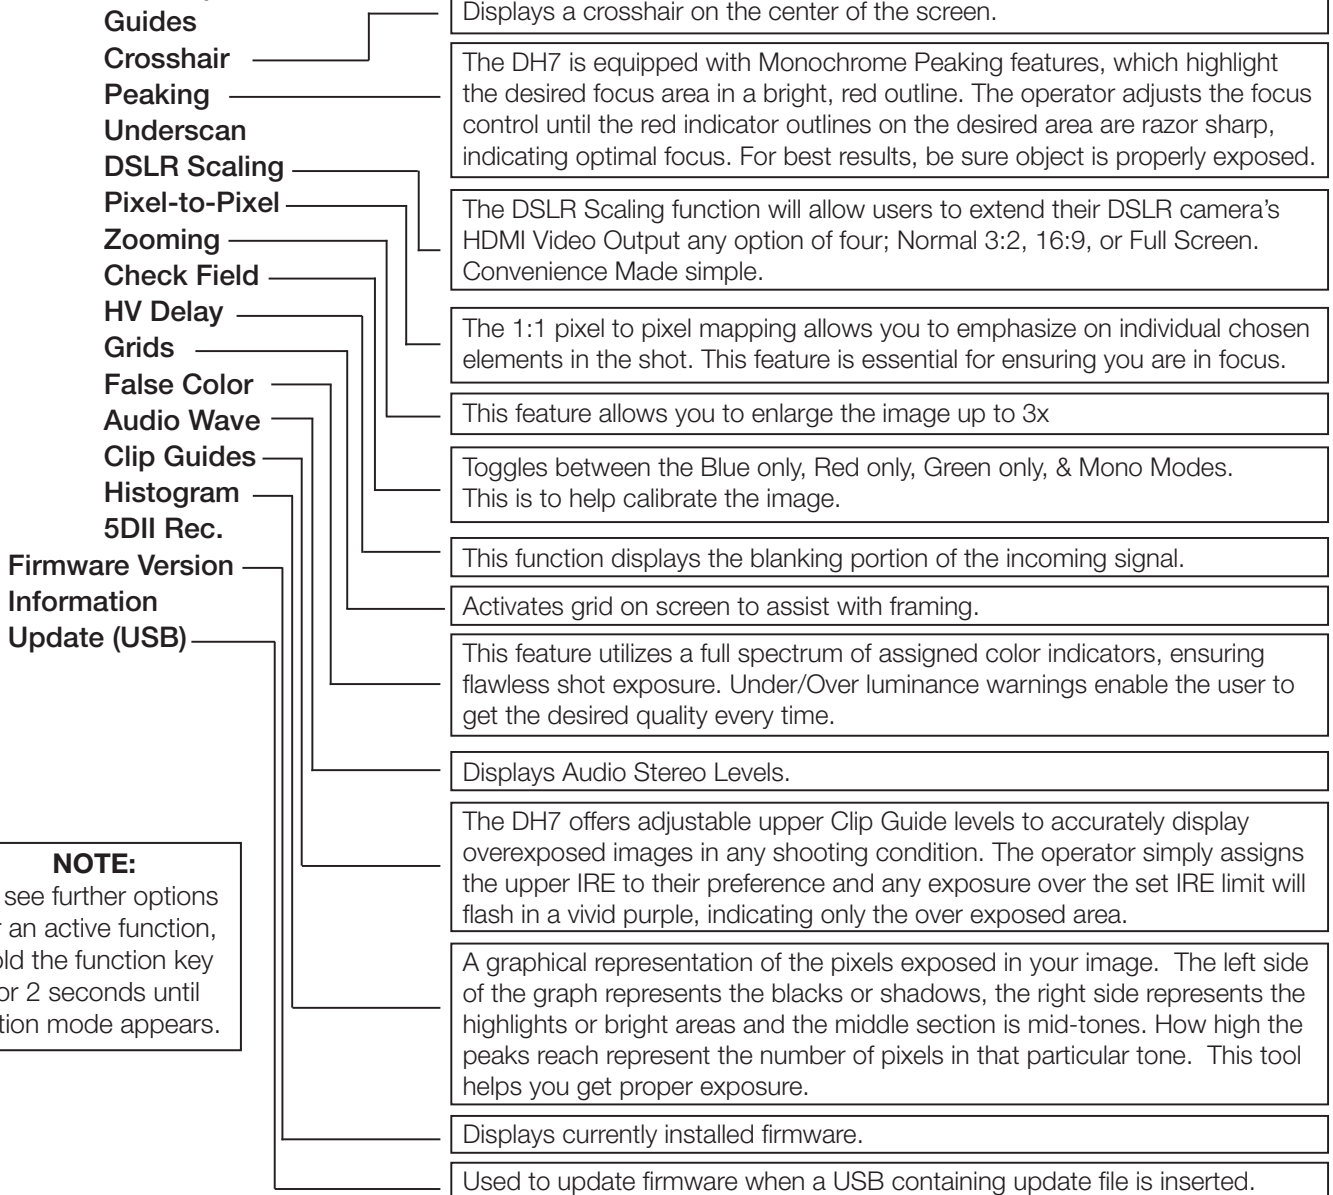

NOTE:
 To see further options for an active function, hold the function key for 2 seconds until option mode appears.

Specifications

Aspect Ratio	16 x 10	Outputs	HDMI
Backlight	LED	Pixel Pitch	0.07875 x 0.07875 mm
Brightness	300cd/m2	Power Consumption	6W
Build Material	Heavy Duty Plastic	Resolution	1920 x 1200
Color Depth	16.7 Million	Response Time	20ms
Color System	PAL/NTSC/SECAM (Auto-Detected)	Screen Size	7 In.
Contrast Ratio	800:1	Viewing Angle	178° horizontal / 178° vertical
Dimensions	7.2 x 4.5 x 0.6 In.	Weight	0.5 lbs
Input Voltage	DC 7V - 24V	Shipping Dimensions	3 x 14.75 x 7.75 In.
Inputs	HDMI	Shipping Weight	2 lbs
Operating Temperature	0°C~50°C / 32°F~122°F		

Supported Video Signals

HDMI	720x480i & 720x480p @ 59.94, 60 Hz
	720x576i @ 50 Hz
	1280x720p @ 23.97, 24, 25, 29.94, 30, 50, 59.94, 60 Hz
	1920x1080i @ 50, 59.94, 60 Hz
	1920x1080psf @ 24, 25, 29.97, 30 Hz
	1920x1080p @ 23.97, 24, 25, 29.94, 30, 50.94, 60 Hz
	3840x2160p @ 24, 25, 30 Hz

Optional Accessories

MOUNTS

MA207	7 In. Articulating Arm
MA211	11 In. Articulating Arm
MA211-R	11 In. Articulating Arm w/ Single Rod Mount

BATTERY PLATES

BP5-C	Canon 900 Battery Plate
BP5-E6	Canon LP-E6+ Battery Plate
BP5-P	Panasonic D54 Battery
BP5-S	Sony L Series Battery Plate
BP5-N	Nikon EN-EL15 Battery Plate
BP5-PG6	Panasonic G6 Battery Plate
BP5-SU	Sony BP-U Series Battery Plate

Learn More

More dynamic information at official website: www.ikancorp.com

Support

Contact email: support@ikancorp.com

CONDITIONS OF WARRANTY SERVICE

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period is expired.

Free Service will not be Provided in the Following Situations:(*Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors, etc.