


# HS-PT700

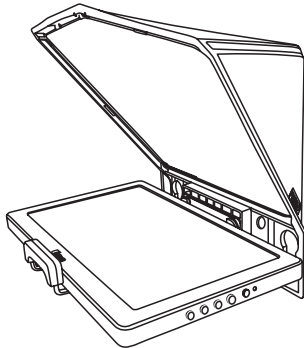


HomeStream Teleprompter w/ 7" Monitor




# What's Included

- 1 x Teleprompter
- 1 x Teleprompter Glass Cover
- 1 x Smartphone Holder
- 1 x Smartphone Clamp
- 1 x Bluetooth Remote Control
- 2 x Foam Rings for Smartphone
- 8 x Lens Adapter Rings
- 1 x 7" Monitor with Mirror Image Flip
- 1 x Mini-HDMI to HDMI Cable
- 1 x Micro-USB Cable with Power Adapter


# Installation Steps (DSLR or Mirrorless Camera)

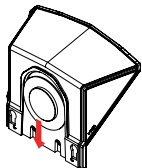


1. Remove the rear cover of the teleprompter

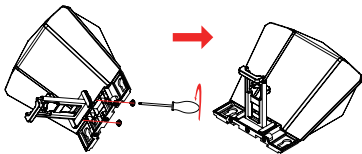


2. If using a phone, attach clamp small side up. If using monitor, use larger adjustment side.

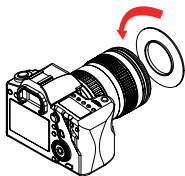

3. Install the lens adapter by screwing it to your lens. Make sure the adapter is screwed on completely.

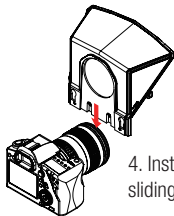


4. Install the teleprompter by sliding it over the ring adapter

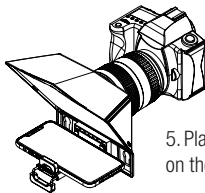


5. Place either monitor or smartphone on the clamp


# Installation Steps (Smartphone as Camera)

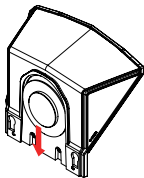


1. Remove the front and rear cover of the teleprompter

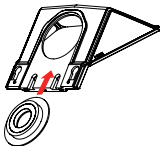

2. Install the adapter ring with foam on the adapter

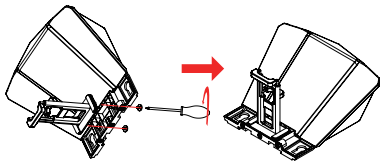


3. If using a phone, attach clamp small side up. If using monitor, use larger adjustment side.

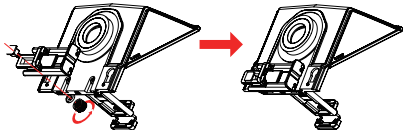


4. Unscrew the knob from the smartphone holder. Smartphone holder can be installed on either side depending on your preference. To record horizontal footages install smartphone holder vertically. To record vertical footages install smartphone holder horizontally.


# Installation Steps (Smartphone as Camera)

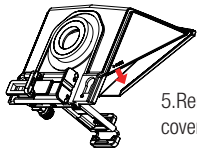


5. Remove the protective cover of the teleprompter

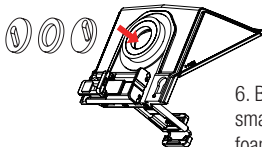

6. Based off the camera of your smartphone place one of the two foam rings into the adapter ring

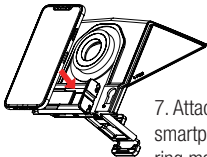


7. Attach the phone to the smartphone holder. Foam ring may need to be rotated and adjusted for various smartphone camera locations

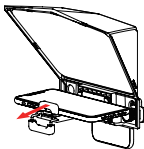


8. Place either monitor or smartphone on the clamp

# Mirror Image Flip Instructions

1. Mount the monitor to the teleprompter bracket with the Ikan logo faced outward towards you.
2. Connect the HDMI cable to your computer and the USB cable into a power source.
3. Select the menu button on the right side of the monitor  to enable the on-screen menu.
4. Within the on-screen menu, select DISPLAY
5. Within the DISPLAY setting, keep H-Mirror OFF and turn V-Mirror ON.

Note: Turning ON either Mirror setting will enable the feature automatically.

## DISPLAY Menu View

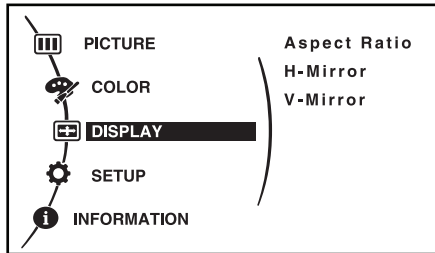

# ~~HOME~~STREAM Bluetooth Remote Controller

(For HomeStream Teleprompter App Only)



# ~~HOMESTREAM~~ Bluetooth Remote Controller

(For HomeStream Teleprompter App Only)

## Instructions

- Power On: Hold down power button for 2 seconds LED light will come on.
- Power Off: Hold down power button for 5 seconds LED light will turn off.
- Pairing Remote: Once the remote is turned on it will be placed in auto pair mode. In your phone's Bluetooth settings locate the HOMESTREAM remote to pair. If you want to pair to a different/new device turn off the remote. Hold down the power button for 8 seconds and the LED light should blink indicating the remote is in pairing mode.
- Power Saving Feature: If the remote is not paired to a device, it will turn off after being in idle for 5 minutes. If the remote is connected to a device, it will turn off after being in idle for 30 minutes.

## DISCLAIMER

HomeStream remote only works with iOS or Android; Does not work with Windows or MacOS.



# ***HOMESTREAM*** Teleprompter App

The Homestream teleprompter app can be found by searching in either the iOS App Store or the Android Play Store for “HomeStream Teleprompter”

## **Learn More**

More dynamic information at official website: [www.ikancorp.com](http://www.ikancorp.com)

## **Support**

Contact email: [support@ikancorp.com](mailto:support@ikancorp.com)



## **CONDITIONS OF WARRANTY SERVICE**

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period is expired.

### **Free Service will not be Provided in the Following Situations:**

**(\*Even if the product is still within the warranty period.)**

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors, etc.