

LEB-003B



575/1200/1800 Watt Electronic Ballast (Lightstar)



What's Included

- 1 x 575/1200/1800 Watt Ballast
- 1 x 7-Meter Heavy Duty Head to Ballast Cable



CHECKED BY



Ikan is the exclusive distributor of Lightstar products in the United States.

Safety Precautions

Electrical Connections: Do not attach the ballast directly to any electrical mains. The ballast has the proper three pin grounded plug that works with a standard AC socket.

The 575/1200/1800 Watt Electronic Ballast can only be used with a Lightstar 575 Watt, 1200 Watt, or 1800 Watt light fixture.

Before connecting the electronic ballast to the power supply, make sure that the socket is correctly wired.

Lamp head must be disconnected from the electronic ballast or the electronic ballast must be disconnected from main power supply before fitting or replacing a lamp or bulb.

The electronic ballast must be switched off before connecting or disconnecting either head to ballast cable or power supply cable.

The electronic ballast must be placed only on solid, flat, and dry ground. Do NOT place the electronic ballast in direct sunlight. Do NOT operate the electronic ballast in high humidity areas or near easily flammable materials.

Installation Instructions

Connecting a fixture to the ballast and energizing the ballast with power.

- A Qualified electrician should be used for all electrical connections and/or installation.
- Make sure the ballast and the lamp head fixture are compatible.
- Check that the ballast is appropriate for the AC power that will energize the ballast and fixture. (Voltage & Frequency)
- The ballast needs to be properly grounded and the main power switch is in the OFF position.
- The lamp with proper wattage is fitted into the head fixture.
- Make sure the AC power is not higher than the max power of the ballast.
- Make sure the safety glass shield is in good, working order with no cracks or anomalies. The safety glass is in the proper position and there is a safety wire guard.

Specifications

Fixture Specifications	
Dimming	50-100%
Dimensions	12.2 x 7.3 x 7.9 in.
Weight	16.7 lbs
Input Voltage	90-125 VAC; 180-250 VAC
IP Class	IP22

Optional Accessories

Some other products that work well with the LEB-003B available from Ikan include:

- LSC-002** 575 Watt HMI Fresnel Head Includes Barn Doors (Lightstar)
- LSC-003** 1200 Watt HMI Fresnel Head Includes Barn Doors (Lightstar)
- LSGP-001** 1200/1800 Watt HMI PAR Head (Lightstar)
- LS-HB15** Head to Ballast Cable 50' (15m) (Lightstar)
- LS-HB7** Head to Ballast Cable 23' (7m) (Lightstar)

Learn More

More dynamic information at official website: www.ikancorp.com

Support

Contact email: support@ikancorp.com

CONDITIONS OF WARRANTY SERVICE

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period is expired.

Free Service will not be Provided in the Following Situations:(*Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors, etc.

©2017 ikan Corporation. All rights reserved