

INTRODUCTION

Thank you for purchasing the ikan VH7e-DK Deluxe Kit. We know that you will be satisfied with our "V" series monitors. Please visit www.ikancorp.com for more information on our current and future products including our award-winning fluorescent studio lights and light accessories.

PACKAGE INCLUDES

- VH7e Monitor
- AC Power Adapter
- Camera Shoe Mount
- DV Battery Plate
- DV Battery Charger
- DV Battery
- 2 x Composite Female RCA Cable


(Check One)

- BP2T-S
- BP2T-C
- BP2T-P

- Sony "L" Series
- Canon "900" Series
- Panasonic "D54" Series



MONITOR DIAGRAMS

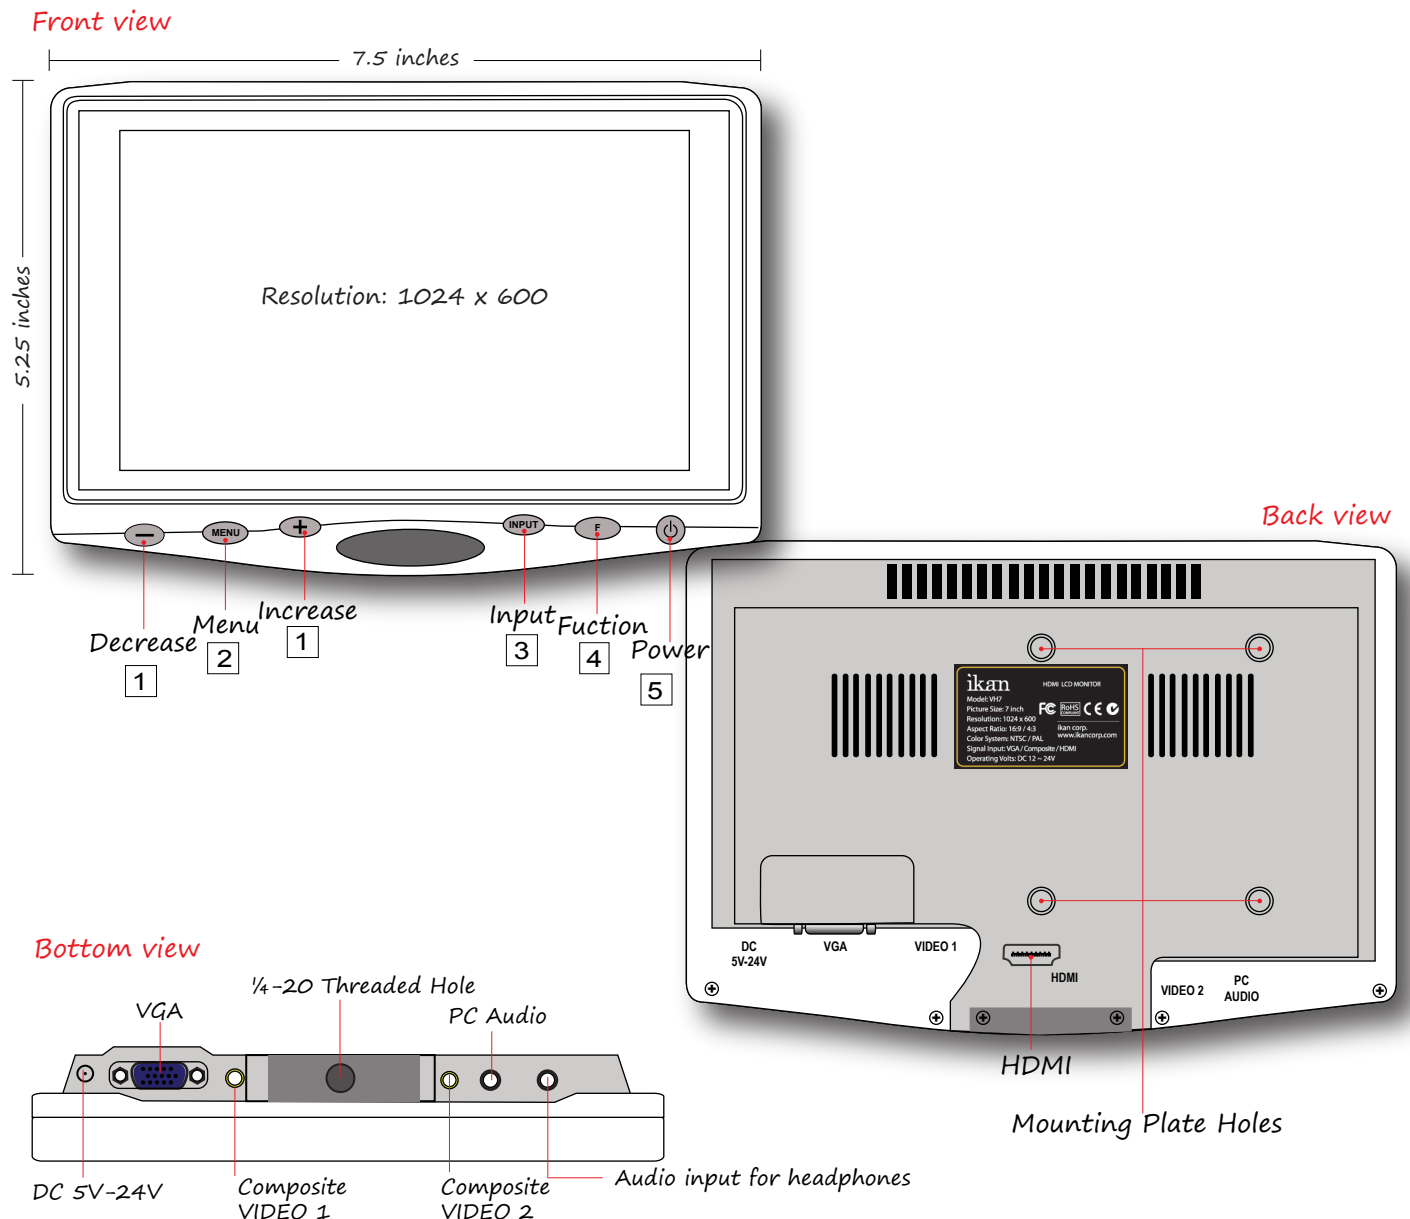

CONFIGURATION OF SETTING MENUS

GUIDES

- Guides Full
 - Off
 - Mode 1
 - Mode 2
 - Mode 3
- Guides 4:3
 - Off
 - Mode 1
 - Mode 2
- G. Background (Changes the opacity of the areas outside the guides)
 - Normal
 - Half
 - Black
- Crosshair (Places a crosshair in the center of the image)
 - On
 - Off
- Return

VIDEO CONFIG.

- Contrast [0 - 100]
- Brightness [0 - 100]
- Tint [0 - 100]
- Chroma [0 - 100]
- Sharpness [0 - 100]
- RGB Setup (Allows you to individually Adjust Color Values)
 - User R [0 - 255]
 - User G [0 - 255]
 - User B [0 - 255]
 - Offset R [0 - 255]
 - Offset G [0 - 255]
 - Offset B [0 - 255]
- Return

SYSTEM CONFIG.

- Menu Duration [5 -60]
- Menu Setup (Saves 5 User Menu Presets)
 - User 1
 - User 2
 - User 3
 - User 4
 - User 5
- Reset
- Return

PC SETUP (These options for when using VGA input)

- H – Positon [0 - 100]
- V – Position [0 - 100]
- Clock [0 - 100]
- Phase [0 - 100]
- Auto Adjust
- Return

CONFIGURATION OF SETTING MENUS

FUNCTION SETUP

Check Field (Allows you to view only certain color channels of the video signal.)

- Off
- Blue
- Red
- Green
- Mono

Peaking Filter (A filter used to help you focus. It outlines the edges of items in focus with a red color.)

- Off
- On

Aspect

- Full

Func. Set (Allows you to set one of the functions to the Function button on the front of the monitor)

- Check Field
- Peaking Filter
- Aspect
- Guides
- Crosshair

Return

EXIT

BUTTON FUNCTIONS

- | | |
|--|---|
| <p>1 Volume Buttons
Decreases and increases volume aswell as toggle through menu.</p> <p>2 Menu Button
It is to display brightness, contrast, phase, clock, H position, V position, language, auto, reset, volume, exit.</p> <p>3 Input Button
Video selection switch AV1, AV2, VGA, HDMI</p> | <p>4 Function Button
Allows you to set one of the functions to the Function button on the front of the monitor</p> <p>5 Power Button
Turns monitor on and off</p> |
|--|---|

CONDITIONS OF WARRANTY SERVICE

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period has expired.

Free Service will not be Provided in the Following Situations: (** Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors etc.