### Elements Plus Blackmagic Pocket Cinema Kit - 15mm QUICKSTART GUIDE



Checked by

#### **CONDITIONS OF WARRANTY SERVICE**

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period has expired.

Free Service will not be Provided in the Following Situations: (\* Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors etc.



### Elements Plus Blackmagic Pocket Cinema Kit - 15mm QUICKSTART GUIDE

### What's included



15mm Rod Mount



Base Plate



Side Arm Support



Swivel Top Handle



1 x 7.8" Rod (15mm)





Threaded Rod
Connectors



4 x 3mm Screws



Single Rod
Clamp





## Elements Plus Blackmagic Pocket Cinema Kit - 15mm QUICKSTART GUIDE

## **Rig Assembly**

### Step 1:

•Attach the Rod Mount to the Base Plate by using two 5mm Hex Screws with the 5mm Hex Key.







•With 4 mounting points vertically along the Base Plate the Rod Mount can be adjusted to your desired height.



## **Elements Plus Blackmagic Pocket Cinema Kit - 15mm QUICKSTART GUIDE**

## **Rig Assembly**



## Step 2:

•Attach the Side Arm Support to the Base Plate by using two 3mm Hex Screws with the 4mm Hex Key.





## Elements Plus Blackmagic Pocket Cinema Kit - 15mm QUICKSTART GUIDE

## **Attaching the Top Handle**

## Step 3:





## Elements Plus Blackmagic Pocket Cinema Kit - 15mm QUICKSTART GUIDE

## 15mm Rods & Accessory Cross Arm

Step 4:



## Elements Plus Blackmagic Pocket Cinema Kit - 15mm QUICKSTART GUIDE







### CONDITIONS OF WARRANTY SERVICE

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period has expired.

Free Service will not be Provided in the Following Situations: (\* Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors etc.