#### **ELE-FLY-DELUXE QUICKSTART GUIDE**



#### **CONDITIONS OF WARRANTY SERVICE**

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period has expired.


Free Service will not be Provided in the Following Situations: (\* Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors etc.



☐ 1 x CHEESE PLATE W/HANDLES


## **ELE-FLY-DELUXE QUICKSTART GUIDE**

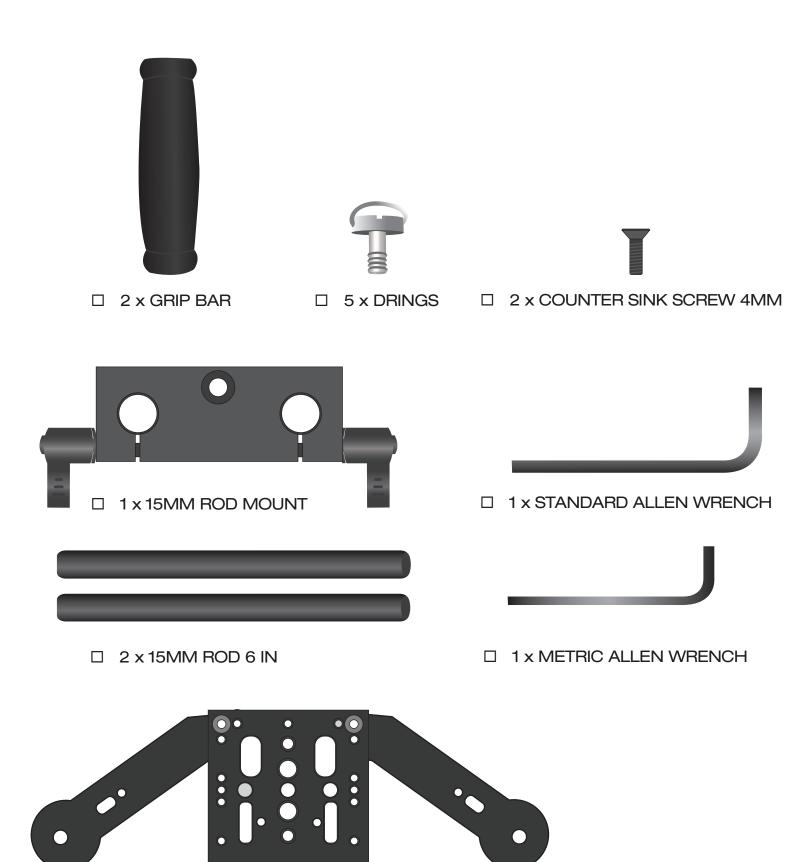

### **ELE-FLY-DELUXE ASSEMBLY STEP 1**

#### **FORWARD VIEW**

1. Align circular opening on the handle (ELE-HDL) with the 1/4-20" thread on Grip Bar (ELE-GB-F) and screw in D-Rings.

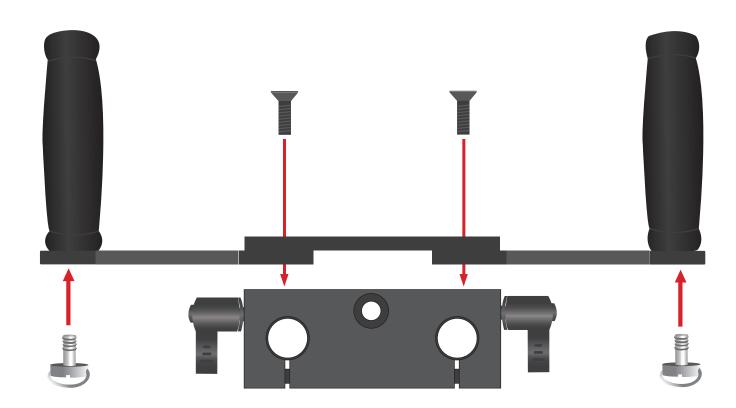

#### **ELE-FLY-DELUXE ASSEMBLY STEP 2**

#### **TOP VIEW**

2. Align countersink hole on corners of cheese plate (ELE-PT) with 4mm thread on top of 15mm Rod Mount (ELE-15RM) and screw in 4mm countersink screw.

