



What's Included

- ☐ 1 x Universal Tablet Tray
- ☐ 1 x Tablet Tray 15mm Stud Mount
- ☐ 2 x Teleprompter Rod Clamps
- ☐ 2 x 15mm Rods (12-Inch Length)
- ☐ 1 x 1/4"-20 Thread D-Ring Screw

ikan

www.ikancorp.com


support@ikancorp.com

CHECKED BY


713.272.8822

© 2015 ikan Corporation. All rights Reserved


What's Included

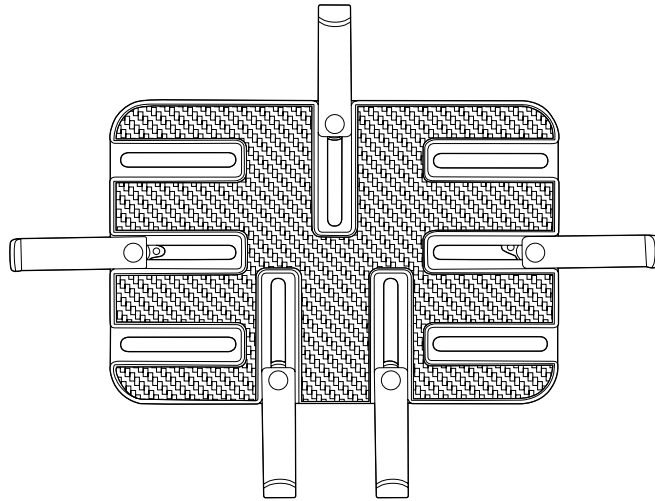


Universal Tablet Tray

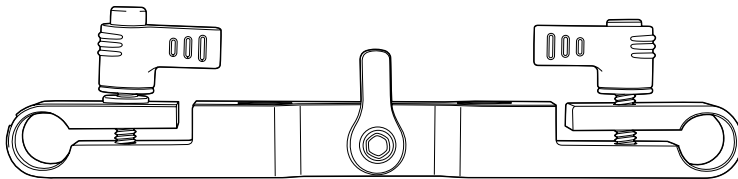


Teleprompter Rod Clamps

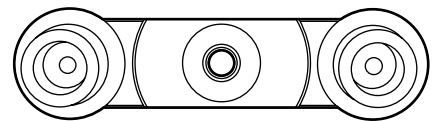

Tablet Tray 15mm Stud Mount

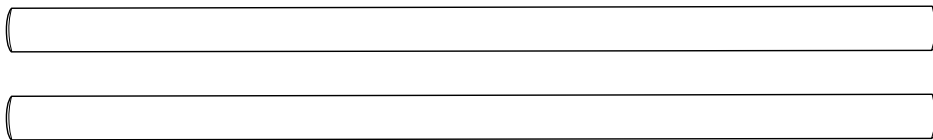

15mm Rods (12-Inch Length)

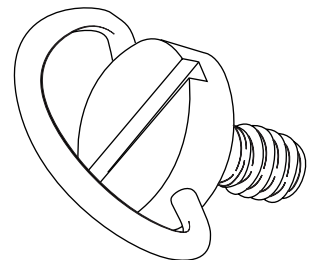


1/4"-20 Thread
D-Ring Screw


Getting Started

Tablet Mounting

The universal tablet tray is compatible with most tablets ranging between 7 and 10 inches. A total of five (5) arms keep the tablet locked into place: one on top, two on bottom, and one on each side.

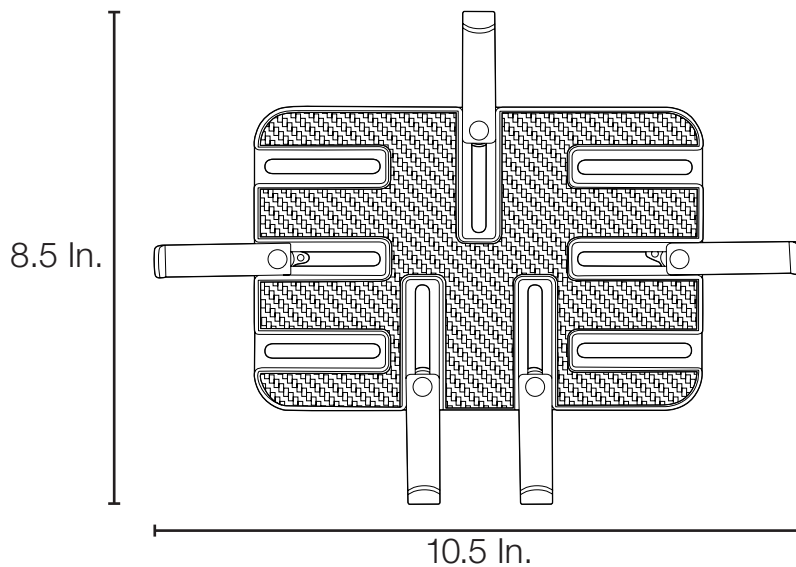


To mount your tablet, open up each arm using the knobs located on the back. Grip the arms tightly around your tablet, and turn the knobs to lock the arms securely in place.

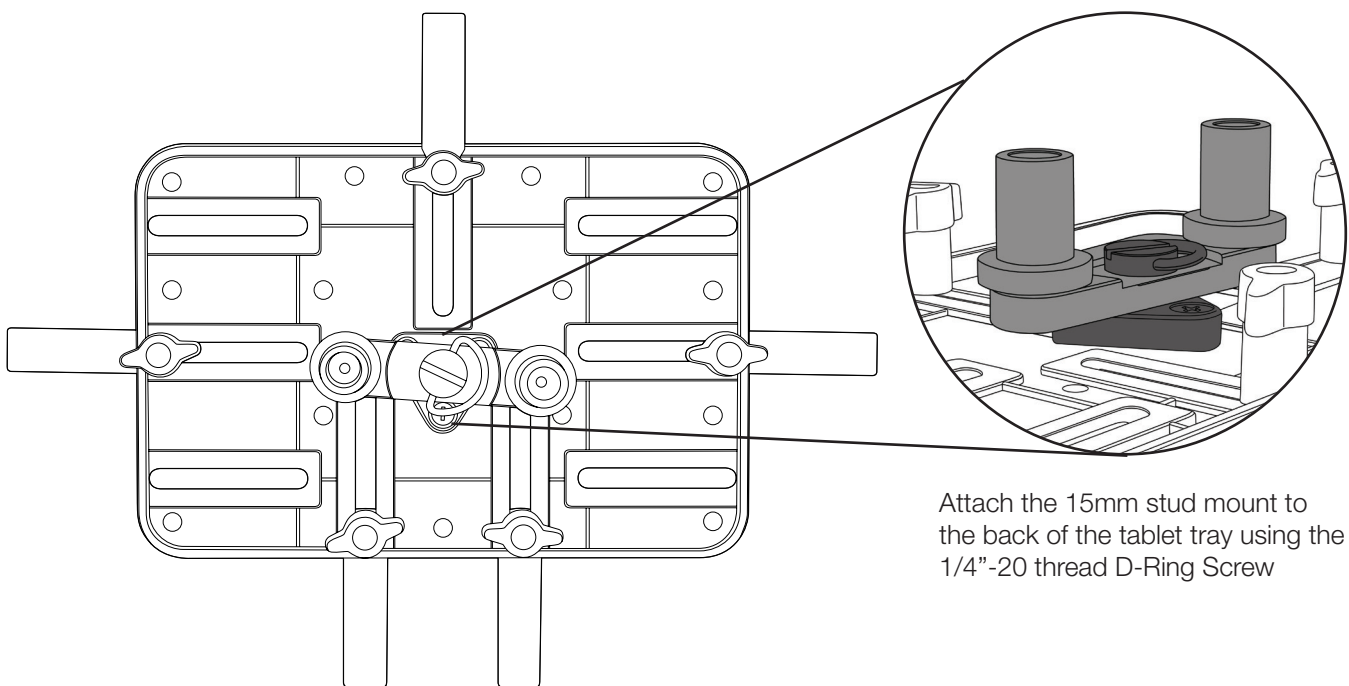

Attach the 15mm stud mount to the back of the tablet tray using the 1/4"-20 thread D-Ring Screw

Teleprompter Assembly

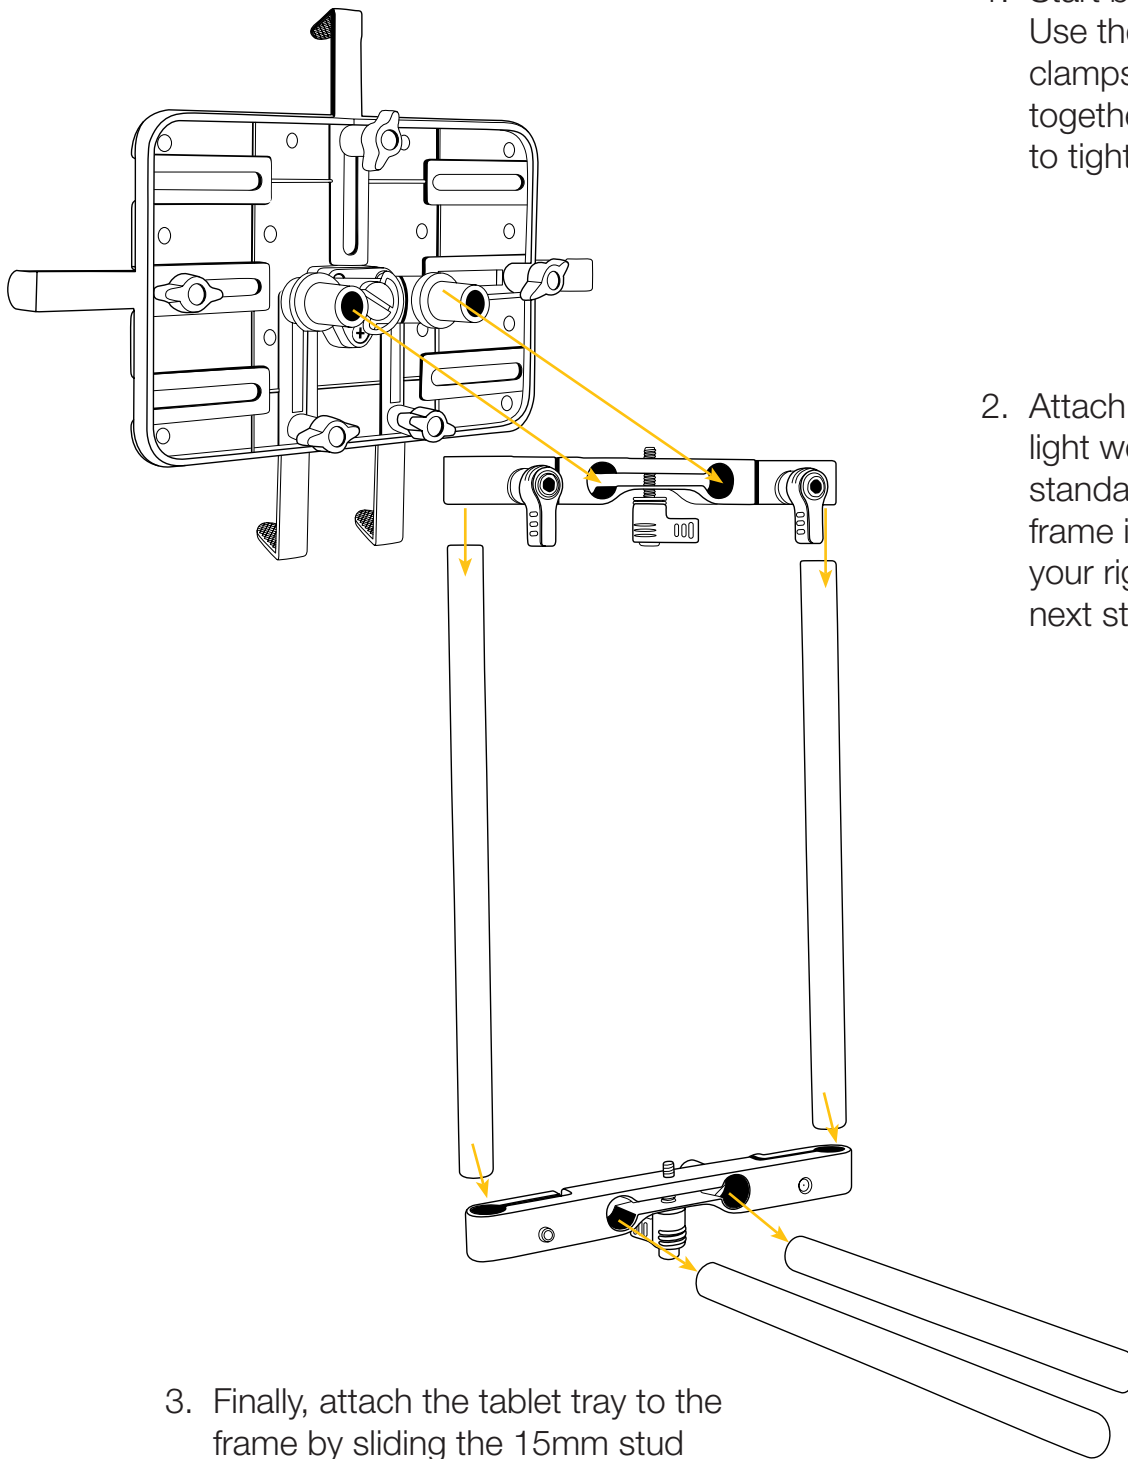

1. Start by assembling the frame. Use the teleprompter rod clamps to join the 15mm rods together. Use the thumbscrews to tighten the frame.
2. Attach the frame to your 15mm light weight support (LWS) standard rig. Make sure the frame is securely attached to your rig before moving on to the next step.

3. Finally, attach the tablet tray to the frame by sliding the 15mm stud mount into the teleprompter rod clamp located on the top. Lock the tablet tray into place using the thumbscrew.

Learn More

More dynamic information at official website: www.ikancorp.com

Support

Contact email: support@ikancorp.com

CONDITIONS OF WARRANTY SERVICE

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period is expired.

Free Service will not be Provided in the Following Situations:(*Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors, etc.