


PT3100e

15" Location/Studio Teleprompter


QUICKSTART GUIDE

15" Location/Studio Teleprompter QUICKSTART GUIDE


What's included

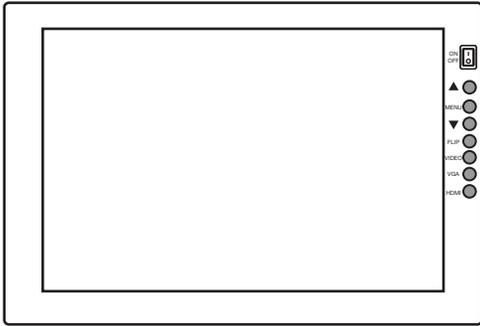

LCD Monitor

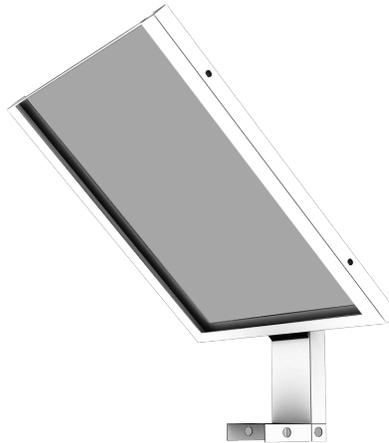


Frame

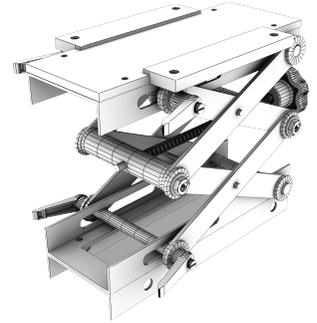


Camera Lift




PrompterPro Software

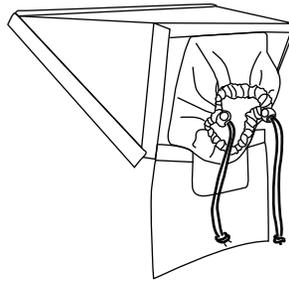


Hood

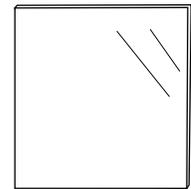


30/70 Prompter Glass

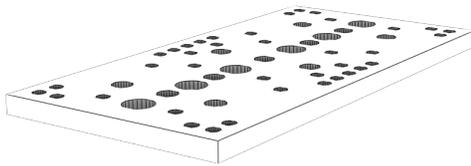

Double Cheese Plate
ELE-DBLPT

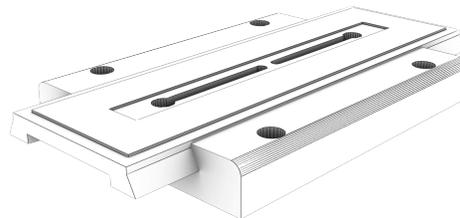


Quick Release Plate

 

2 x Mounting Bracket
(One for monitor mount and one for optional pro battery mount)



 
24" T-Slot Bar




24 x Phillips
Head Screw



 24 x T-Slot Nut




4 x 1/4-20 Socket
Head screw

 


4 x M4x8mm
Mounting Screw

15" Location/Studio Teleprompter QUICKSTART GUIDE

Attach 6 Phillips Head screws and 6 T-Slot nuts to Double Cheese Plate, ELE-DBLPT.

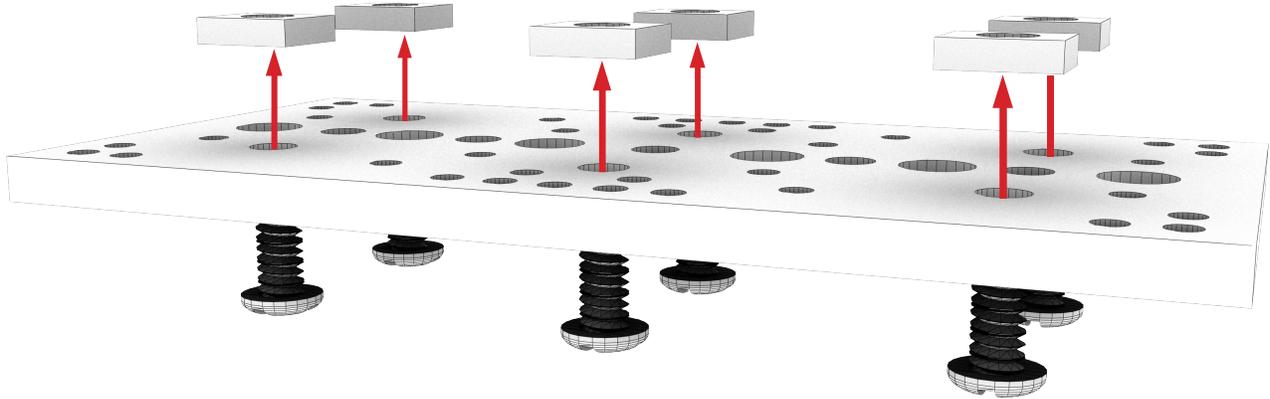


Slide the Double Cheese Plate, ELE-DBLPT onto T-Slot bar.

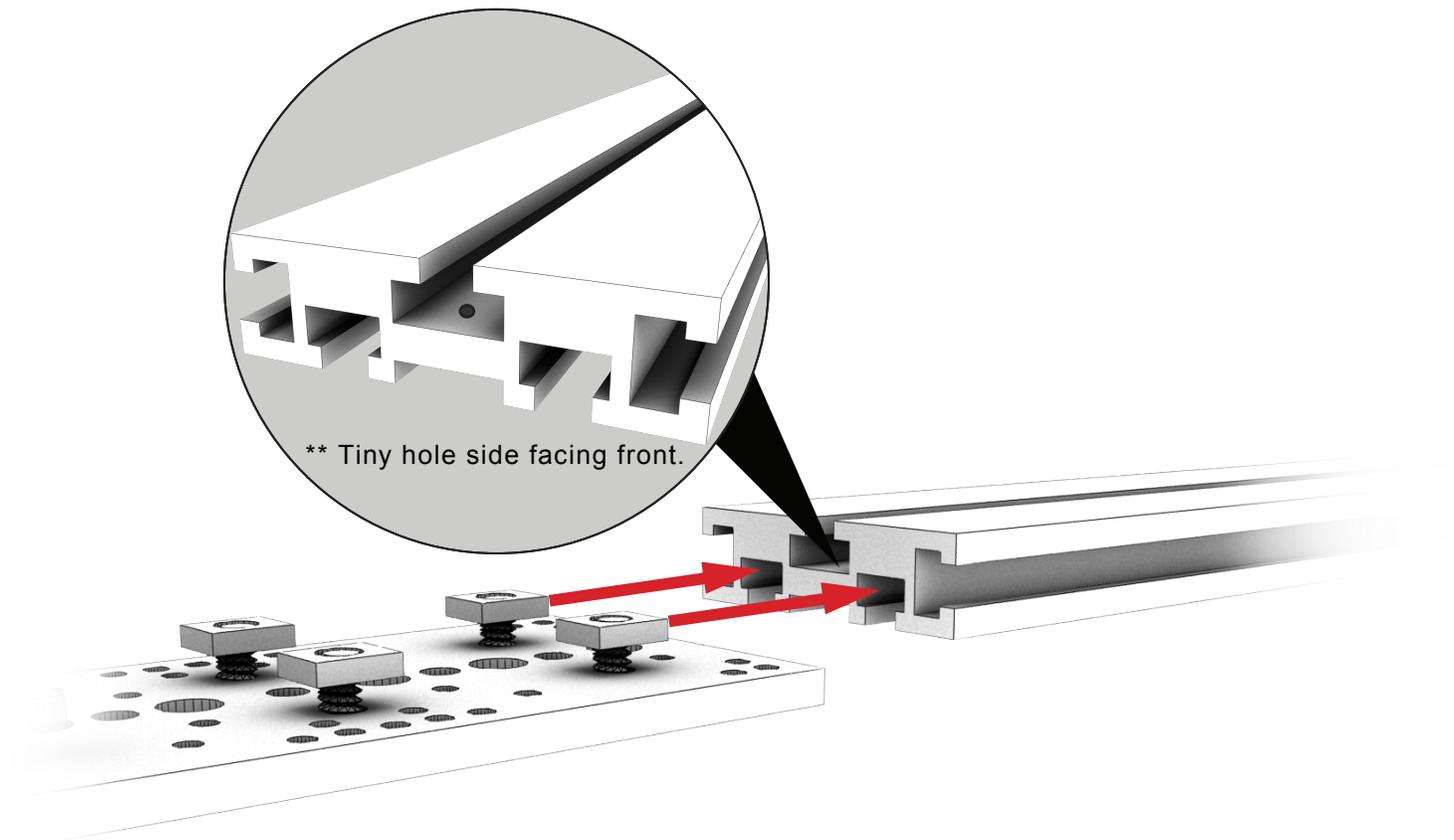


15" Location/Studio Teleprompter QUICKSTART GUIDE


Attach your own tripod skid plate.

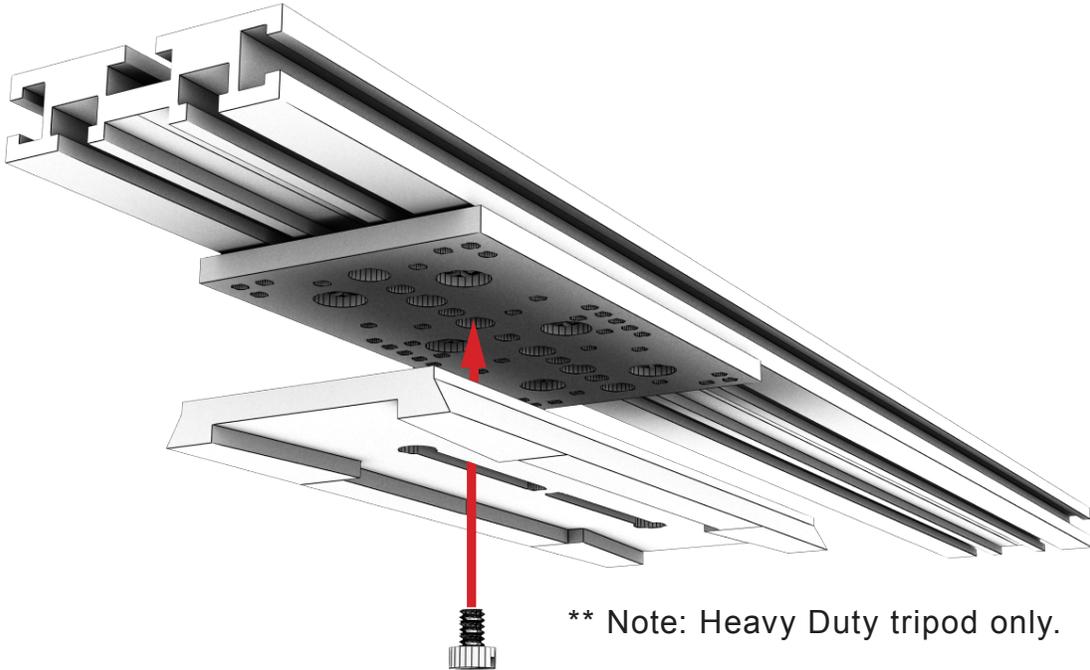

Attach Mounting Bracket onto the monitor with four 4mm Mounting Screw.

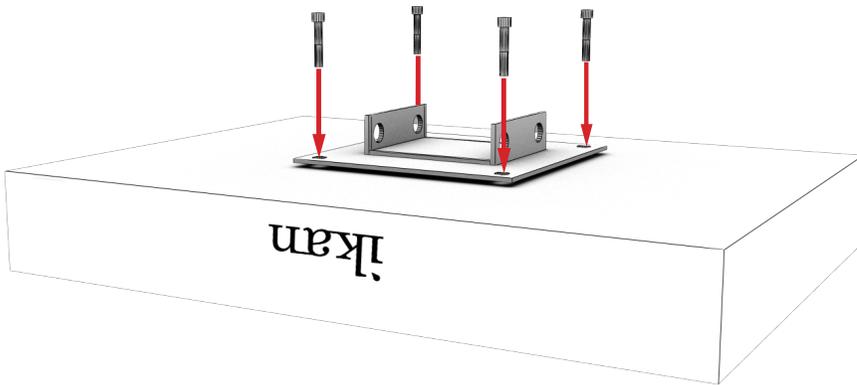


Then, attach four Phillips Head screws and four T-Slot nuts.

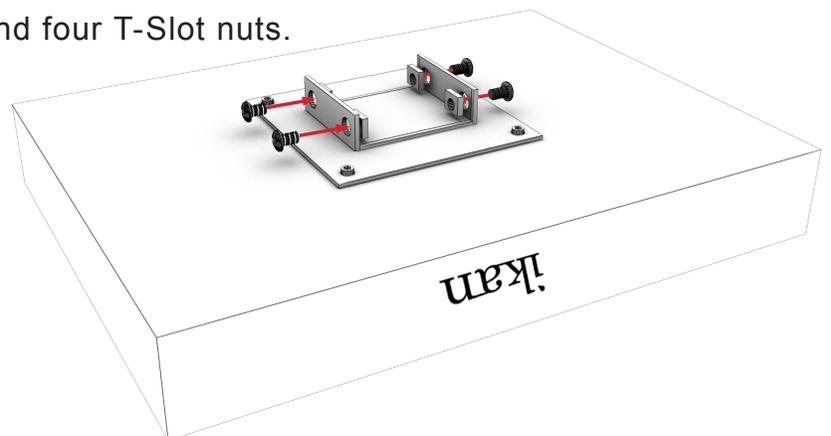


15" Location/Studio Teleprompter QUICKSTART GUIDE

Slide the Monitor onto the T-Slot Bar.

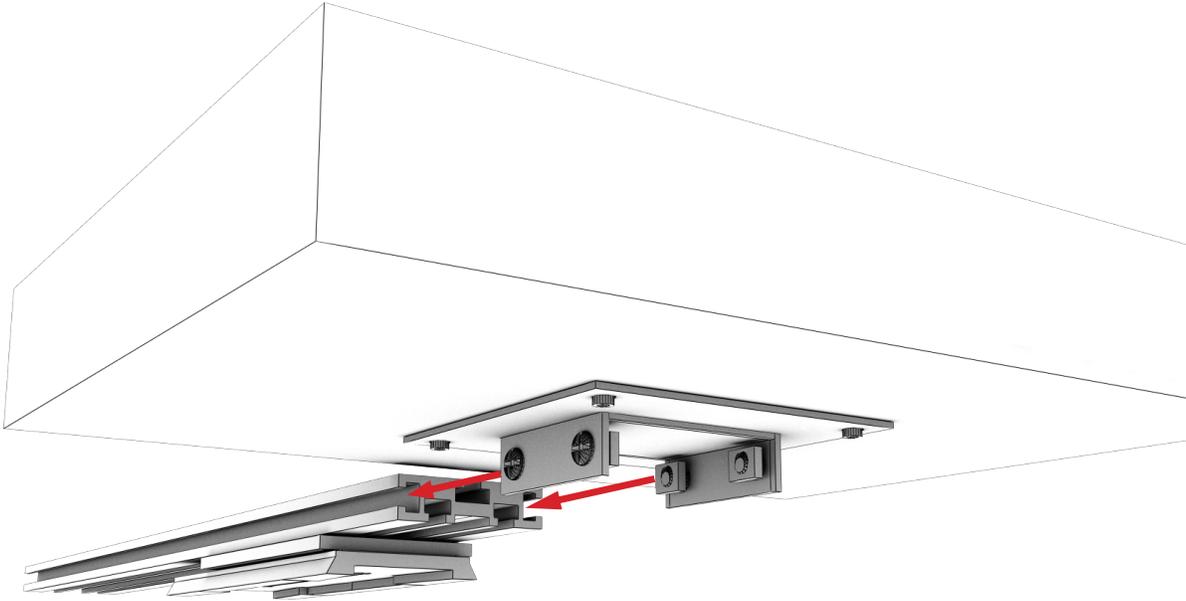

Attach four Phillips Head screws and four T-Slot nuts on the Prompter Glass Frame.

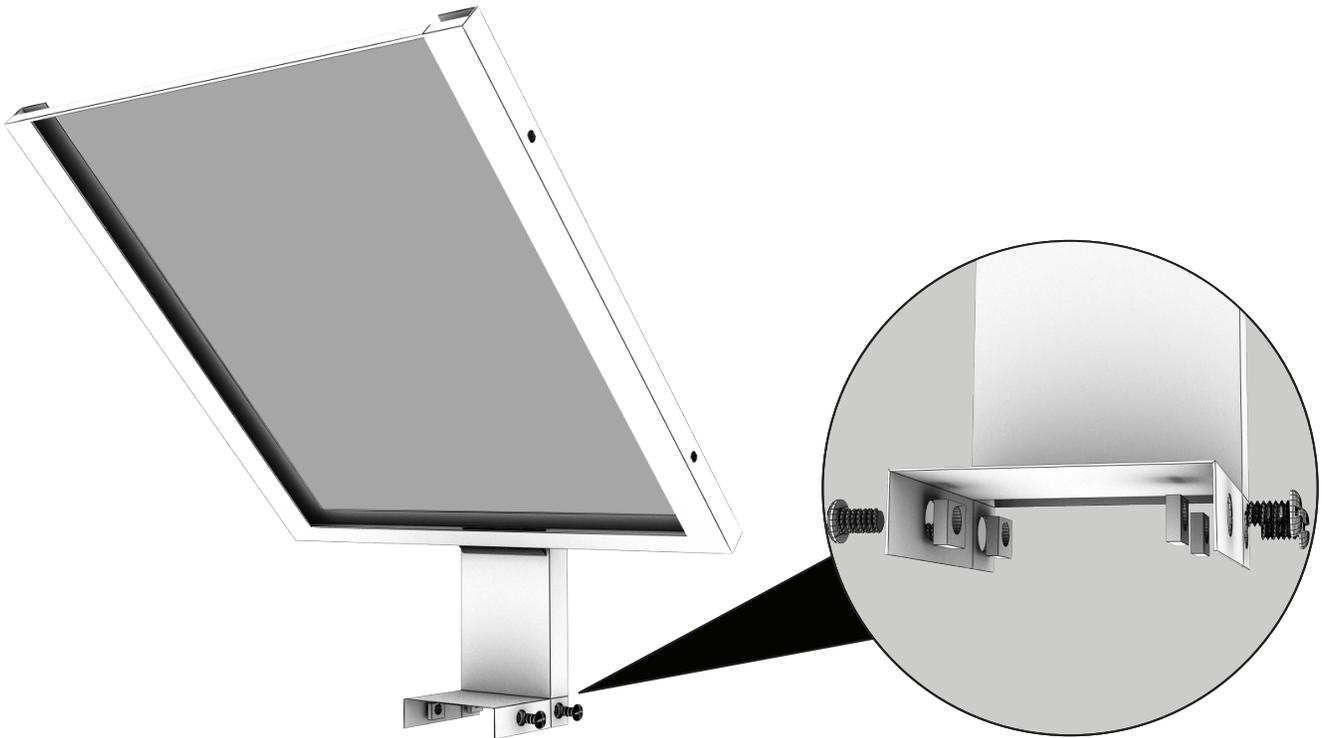

15" Location/Studio Teleprompter QUICKSTART GUIDE

Slide the Prompter Glass Frame onto the T-Slot Bar.




Slide the Prompter Glass Frame upon the monitor.




15" Location/Studio Teleprompter QUICKSTART GUIDE

Attach four Phillips Head screws and four T-Slot nuts on the Camera Lift.

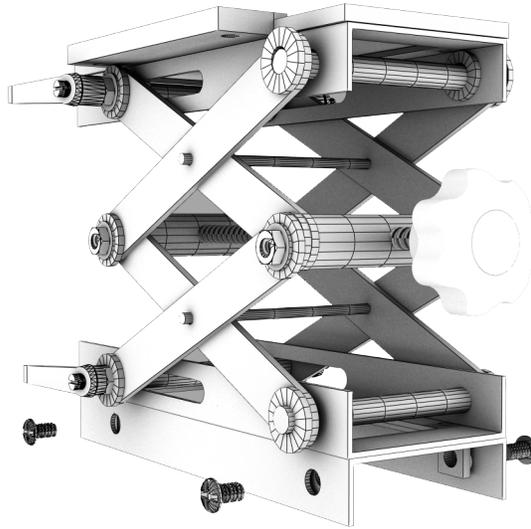


Slide the Camera Lift onto the T-Slot Bar.

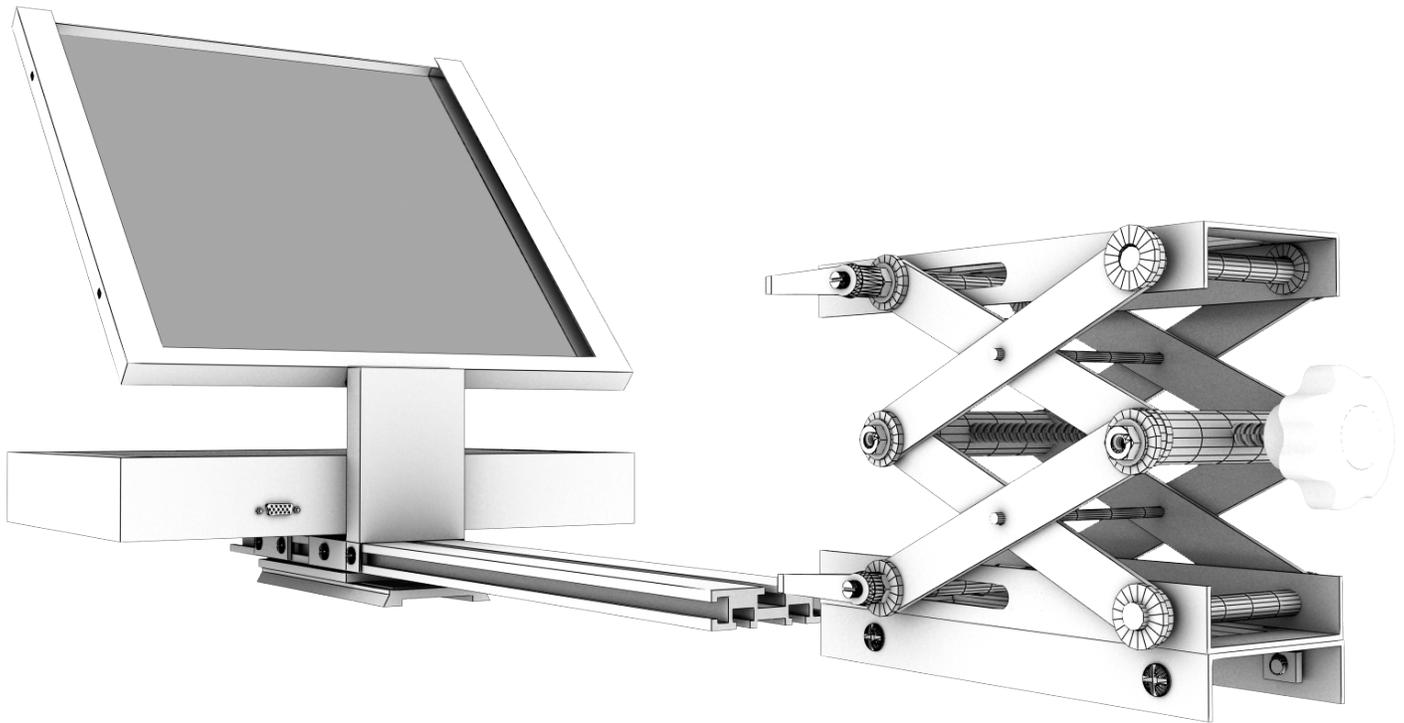


15" Location/Studio Teleprompter QUICKSTART GUIDE

Slide the Camera Lift upon the Prompter Glass Frame.

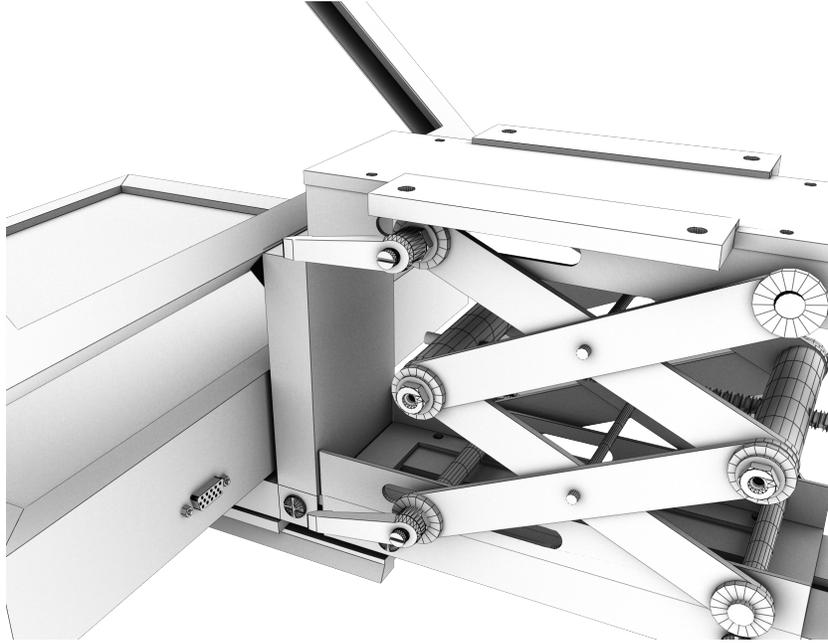

Attach the Quick Release Plate onto the Camera Lift with four 1/4-20 Mounting Screws.

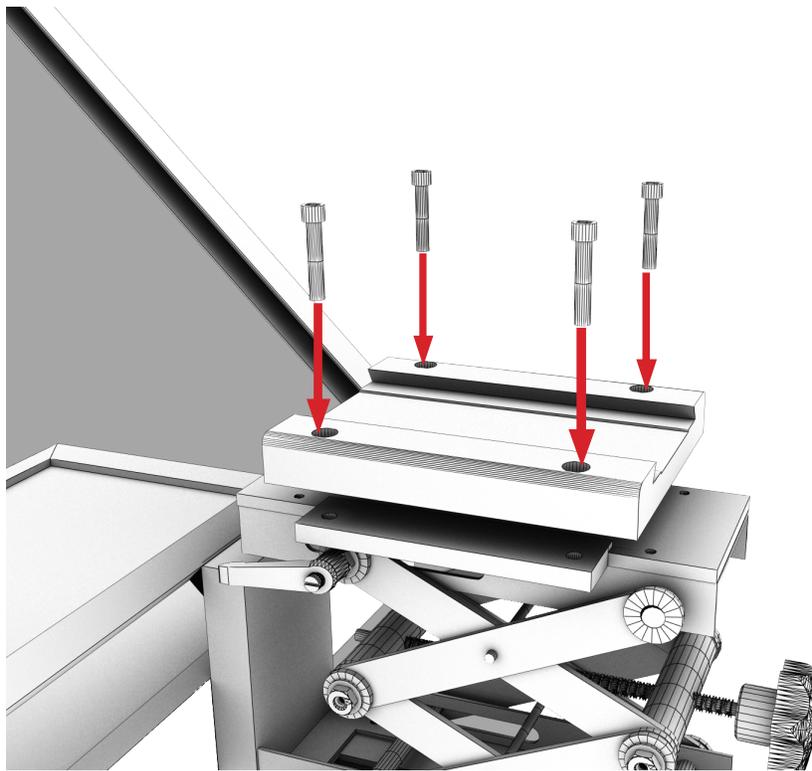

15" Location/Studio Teleprompter QUICKSTART GUIDE

Attach the Magnetic Hood and Fabric Side Flaps.



15" Location/Studio Teleprompter QUICKSTART GUIDE

Complete Assembly



** Camera not included.

15" Location/Studio Teleprompter QUICKSTART GUIDE



VIDEO


Composite Input BNC Connection

VGA

Video Graphics Array DE15 Connection

HDMI

High-Definition Multimedia Interface Input Connection

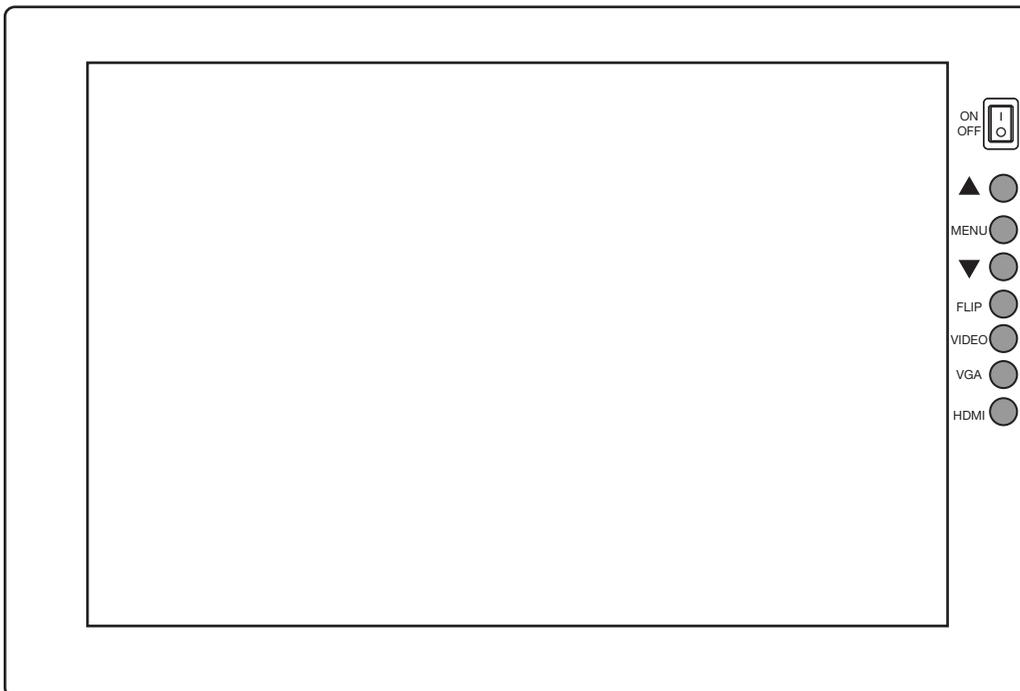

POWER

Power switch (I = On, O = Off)

▲ Toggle up to adjust setting

MENU

Access to all monitor settings: Brightness, Contrast, etc

▼ Toggle down to adjust setting

FLIP

Flip image horizontally

NOTE: 3ft minimum for best viewing distance



CONDITIONS OF WARRANTY SERVICE

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period has expired.

Free Service will not be Provided in the Following Situations: (* Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors etc.