

PT3500 / PT3700

Location / Studio Teleprompter QUICKSTART GUIDE



CONDITIONS OF WARRANTY SERVICE

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period has expired.

Free Service will not be Provided in the Following Situations: (* Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors etc.

PT3500 / PT3700

Location / Studio Teleprompter QUICKSTART GUIDE

What's included



Teleprompter Base Assembly w/ Glass



Camera Mount Assembly



Hood



LCD Monitor w/ Power Supply



200 mm Riser Rods x 2



PrompterPro Software



DRS-01 x 2



Cork Strips x 4



5/32 Hex Key

PT3500 / PT3700


Location / Studio Teleprompter QUICKSTART GUIDE

STEP 1:



Place Teleprompter Base Assembly on a flat surface.

STEP 2:

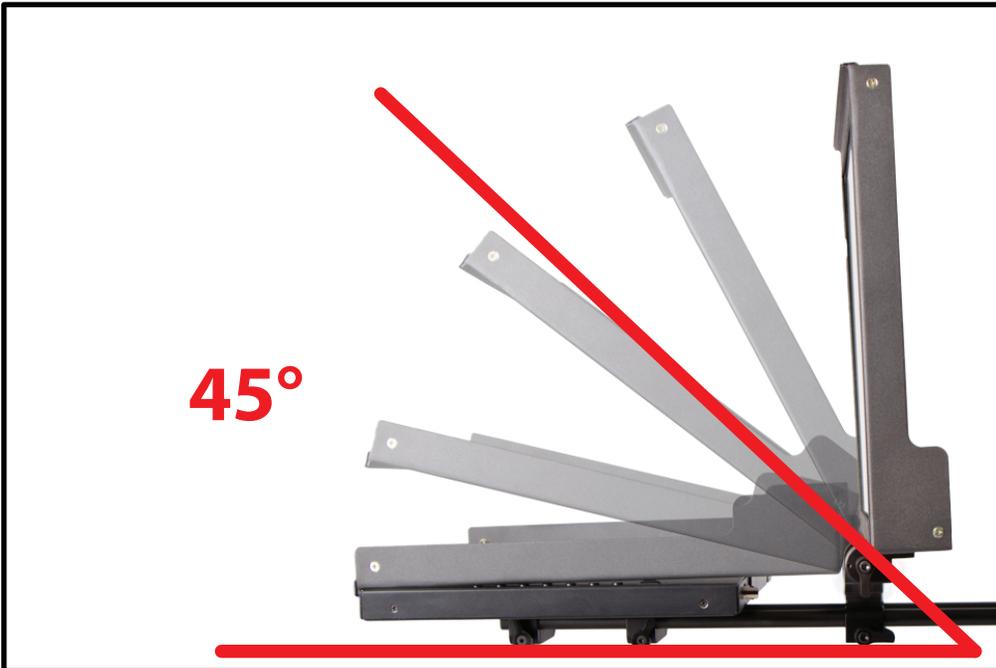

You can position the glass at any angle you want but the preferable angle is 45°.


PT3500 / PT3700

Location / Studio Teleprompter QUICKSTART GUIDE

STEP 3:



Slide the Camera Mount Assembly onto the 15mm Rods.

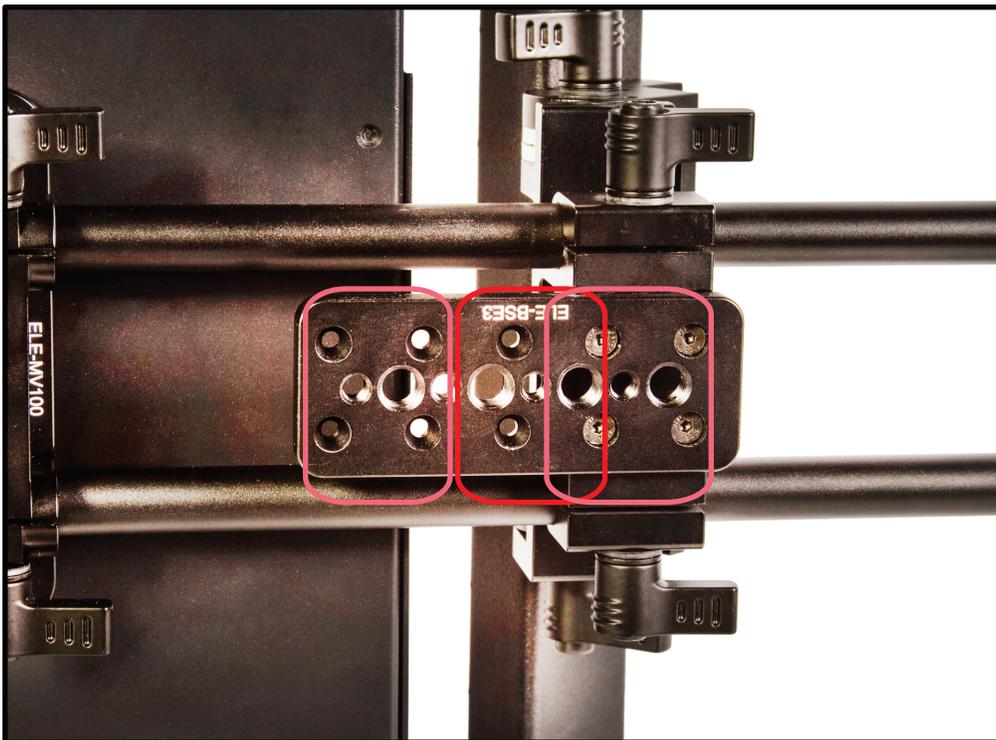

The tripod mount has 3 sets of holes that allow you to mount the plate either towards the front or rear to help balance the teleprompter better.

For larger cameras it is better to have the plate toward the rear and for smaller cameras towards the front.

PT3500 / PT3700

Location / Studio Teleprompter QUICKSTART GUIDE

STEP 4:



Attach camera to camera mount and slide to best position. Make sure all thumb screws are secure.



If you require the camera to be positioned higher you can replace the 200mm raiser bars in place of the pre-installed 130mm Rods.

Use the included 5/32 Hex Key to remove and attach the Raiser Rods.

PT3500 / PT3700

Location / Studio Teleprompter QUICKSTART GUIDE

STEP 5:




Attach hood to glass frame using the integrated magnets. You can attach the optional side flaps.



PT3500 / PT3700

Location / Studio Teleprompter QUICKSTART GUIDE

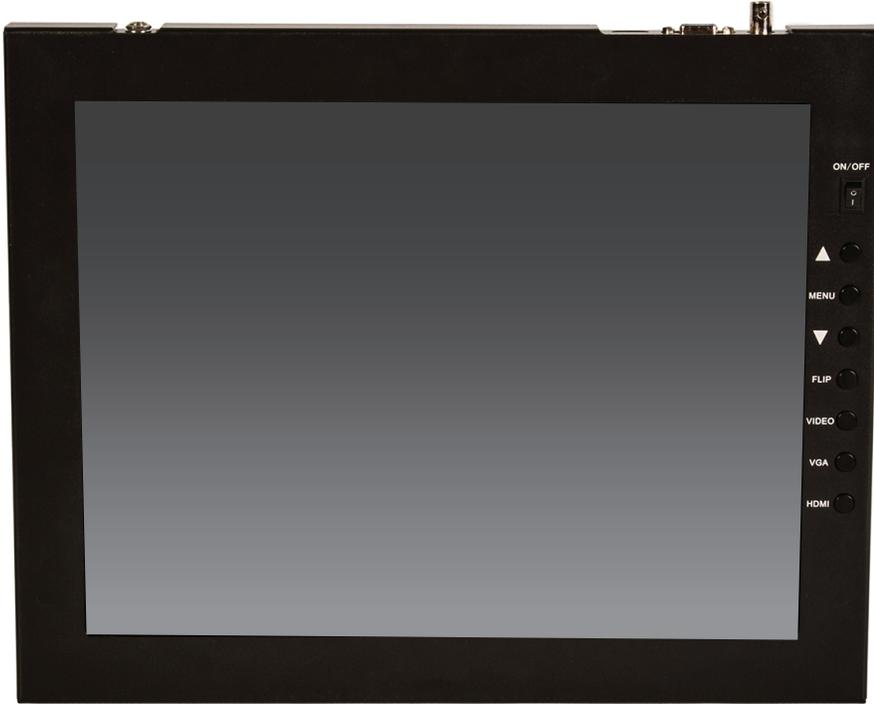

POWER
Power switch (I = On, O = Off)


MENU
Toggle up to adjust setting

MENU
Access to all monitor settings:
Brightness, Contrast, etc

FLIP
Toggle down to adjust setting

FLIP
Flip image horizontally

**Flip function is not available on the PT3700. Flip function available in Prompter Pro 4 Software.*

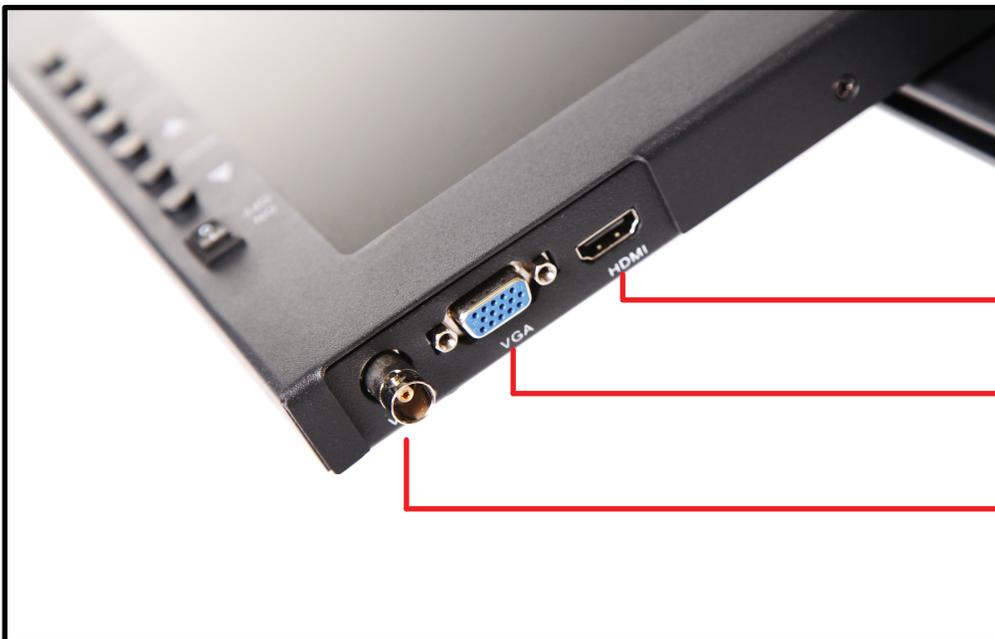

HDMI
High-Definition Multimedia Interface
Input Connection

VGA
Video Graphics Array DE15 Connection

VIDEO
Composite Input BNC Connection

ikan

www.ikancorp.com

713-272-8822

PT3500 / PT3700

Location / Studio Teleprompter QUICKSTART GUIDE



To make your Teleprompter more portable we packed it in a reusable high quality foam. The shape and size of the foam was designed to fit into the SKB i Series 2918 waterproof case. Purchase the SKB case from your favorite dealer and simply slide our foam in the case.

*** DO NOT THROW *
AWAY FOAM CASE**



Glass can be removed from the frame by removing the two phillip head screws.

Easily slide the glass out of the frame.

** You should only need to do this for cleaning **

ikan

www.ikancorp.com

713-272-8822