# PT4500W-PEDESTAL



## 15" Widescreen Teleprompter, Pedestal & Dolly Turnkey



W	nat's	Incl	ud	ea
7 1	x AT790	)3 Ped	desta	al I e

- ☐ 1 x Center Support Column
- ☐ 1 x T30 Carrying Bag
- ☐ 1 x El-7004B Dolly w/ Wheels & Cable Guards
- ☐ 1 x GH20 Fluid Head
- 2 x Pan Handles
- ☐ 1 x Base Plate
- ☐ 1 x Bottom Plate
- ☐ 1 x Base
- ☐ 1 x Glass Frame Holder Bracket
- 1 x 15 in. 70/30 Teleprompter Glass
- ☐ 1 x Hood Attachment Frame
- 1 x Teleprompter Hood Boot
- ☐ 1 x Silicone Teleprompter Hood
- ☐ 1 x Glass Holder
- 2 x 15mm Rod Clamps
- ☐ 2 x 15mm Rods
- ☐ 1 x Large Riser Camera Mount
- ☐ 2 x 3/8-16 D-Ring Screws
- ☐ 2 x D-Ring 1/4-20" Screws
- 1 x Counterweight
- ☐ 1 x Large Riser
- ☐ 1 x DSLR/Mirrorless Riser
- ☐ 1 x Medium Riser
- ☐ 1 x Short Riser Plate
- ☐ 1 x SDI 15 in. Widescreen Teleprompter Monitor
- ☐ 1 x AC Adapter with Cord
- ☐ 1 x Teleprompter Glass
- ☐ 1 x PrompterPro Software (FREE with this teleprompter)

#### **OVERVIEW**

Ikan's Turnkey Broadcast Solutions include everything you need for your professional camera setup. This solution includes a 15" widescreen teleprompter, pedestal, and dolly. All of our systems have been tested internally for payload compatibility.

The remaining payload capacity, after mounting the full 15" teleprompter system without the counterweight, can accommodate camera setups up to 17 lbs. The pedestal, without the teleprompter system, can accommodate cameras up to 35.8 lbs. This solution also includes a hard case for the teleprompter & carrying bag for the pedestal.v









# PT4500W-PEDESTAL

15" High Bright Beam Splitter Teleprompter




## **Teleprompter Assmebly Setup**


# Step 1

Place the teleprompter glass frame on a flat surface and remove the four screws as shown.

# Step 2

Align and attach the teleprompter hood with the 8 screw pegs from the teleprompter frame.

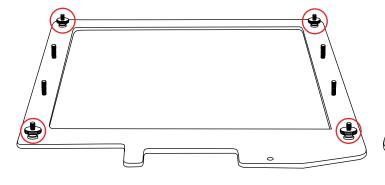

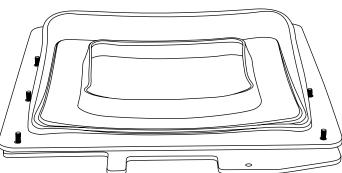











 $\begin{tabular}{ll} \textbf{Step 3} \\ \textbf{The metal frame is directional. Make sure the thicker side is on top and} \\ \end{tabular}$ the slimmer side is on the bottom.

# Step 4


Put the washers on before tightening the screws. The washers and 4 additional screws are inside a bag on the bottom foam.

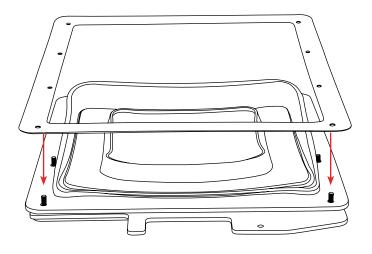


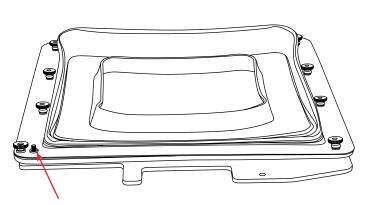

Step 5
Extend the teleprompter hood open and attach teleprompter boot using the clips. It is suggested to align the seam with the bottom of the teleprompter hood.

**Step 6**Remove the monitor mounts from the teleprompter base using the included larger 4mm hex key to loosen from the 15mm rods.

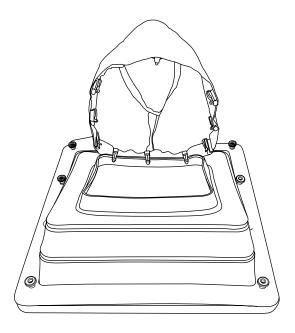

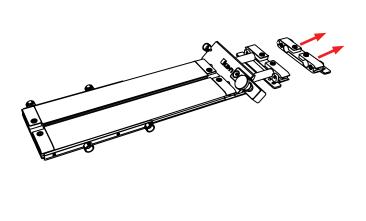











## Step 7

Attach the monitor mounts on the back of the monitor's VESA compatible threads using the 4 included screws and provided 2mm hex key.

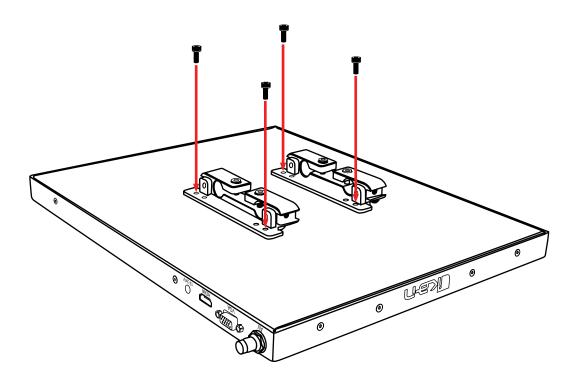

## Step 8

After the monitor mounts are attached, adjust the 15mm rods to accommodate the monitor. Leave about 1 inch of room for the teleprompter bracket. Make sure the 15mm rods go through both set of monitor mounts. Please ensure that all screws are properly tightened after inserting the monitor. \*SAFETY NOTE\* Make sure to leave at least 2 inches of the rods inside the teleprompter base.

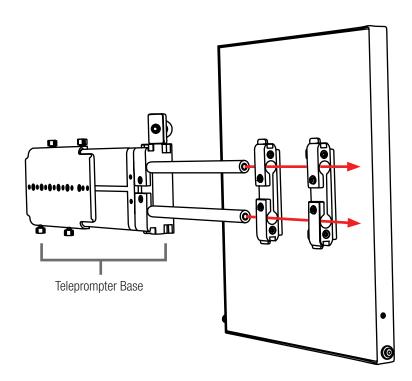










#### Step 9

While sliding the teleprompter bracket into the slot of the teleprompter base pull on the red knob to allow the bracket to fully slide in.

## Step 10

Once the bracket is in place, tighten the side screw to lock in place. Double check and make sure all the screws are tightened with the included hex keys.

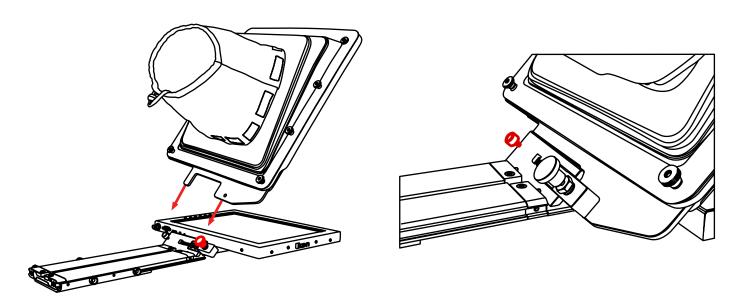

## Step 11 (optional)

Should the teleprompter be too front heavy, you can attach the included counter weight on the back of the teleprompter base.

### **Foam Case**

To make your teleprompter more portable, we packed it in a reusable, high-quality foam. The shape and size of the foam was designed to fit into Ikan's PT-CASE-V2.



\*\* DO NOT THROW AWAY FOAM CASE \*\*











#### **Monitor Ports**

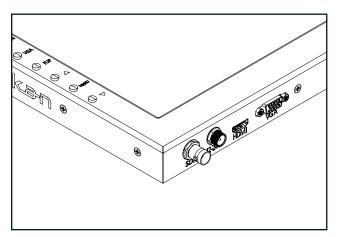

BNC – AV Composite Input VGA – Video Graphics Array DE15 Connection HDMI – High-Definition Multimedia Interface Input Connection

Power Port - 12-24v Input

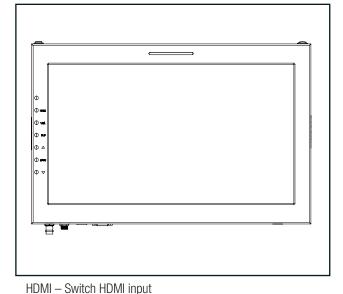

VGA – Switch to VGA input
AV – Switch to composite BNC input
Flip – Toggle image flip
(Can be set to horizontal, vertical, or both via menu)
Up Arrow – Toggle up to adjust setting
Menu – Access to monitor settings
Down Arrow – Toggle down to adjust setting

### **Monitor Menu Settings**

Video Config

Contrast (White Level)

Brightness (Black Level)

Tint (Chroma Hue)

Chroma (Chroma Saturation)

Sharpness (Detail)

RGB Setup - Manually configure RGB

Return

System Config

Menu Duration – Set duration of how long menu stays on screen

Video Ratio – Set screen aspect ratio 16:9 or 4:3 (4:3 is native resolution, 16:9 will create black bars)

Flip-H – Assign toggle button to flip image horizontally

Flip-V – Assign toggle button to flip image vertically

Reset - Factory reset

Return

PC Setup (Only available for VGA)

H-Position – Adjust horizontal position

V-Position – Adjust vertical position

Auto — Monitor automatically adjust position

Return

Exit

### How to set-up FLIP button feature:


- 1. Press MENU button
- 2. Navigate to SYSTEM CONFIG.
- 3. Navigate to FLIP-V or FLIP-H
- 4. Change FLIP-V and/or FLIP-H to "ON"
- 5. Exit MENU
- 6. The FLIP button should now be activated and can be pressed to mirror the image Horizontally or Vertically
- 7. When FLIP-H is ON, the image will flip Horizontally
- 8. When FLIP-V is ON, the image will flip Vertically
- 9. If both are ON, the FLIP button will toggle both Horizontal and Vertical flip










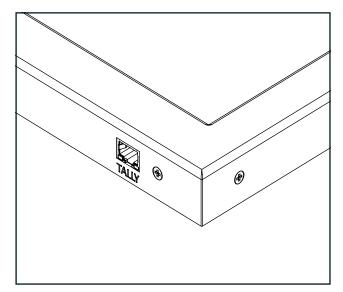



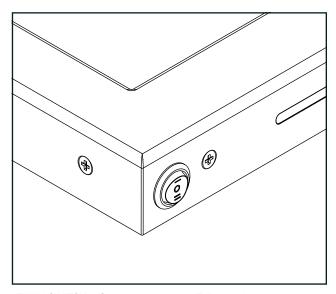

TALLY SWITCH – Switch between two Tally locations

# **Specifications**

#### PT4500W

Aspect Ratio	16:9	
Maximum Brightness	1000 cd/m2	
Screen Size (Diagonal)	15 in.	
Mount	VESA 100mm	
Video Inputs	SDI, HDMI, VGA	
Input Voltage	DC 12v	
Power Consumption	26.5W	
Product Weight	3.73 lbs.	
Product Dimensions	15.7 x 10.6 x 1.1 in.	
LCD Panel Dimensions	13.5 x 7.7 in.	
Native Resolution	1920 x 1080	
Viewing Angle	178° (H) / 178° (V)	
Build Material	Aluminum Chassis	
Image Flip	Horizontal: Yes Vertical: Yes	
Tally Input Port	RJ45 (3-Pin)	

Watch our VIDEO TUTORIAL on how to assemble Ikan Professional Telepromopters: https://youtu.be/5TjlxzBc\_Vc



## **Optional Accessories**

**PT4500-G** Replacement Glass for both PT4500 / PT4700

**PT15-HB-V2** 15" High Bright Monitor (for PT4500) 17" High Bright Monitor (for PT4700)

**PT-CASE-V2** Rolling Hard Case for PT4500/PT4700 Teleprompter









#### **Learn More**

More dynamic information at official website: www.ikancorp.com

## **Support**

Contact email: support@ikancorp.com

#### **CONDITIONS OF WARRANTY SERVICE**

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period is expired.

#### Free Service will not be Provided in the Following Situations: (\*Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors, etc.

©2021 Ikan International. All rights reserved.







