

PrompterPro 3

PC Software QUICKSTART GUIDE

Teleprompter Setting

Keyboard shortcuts:		Main Menu Options:	
F5	Stop / Start Scroll Up	Open File	Allows you to browse you computer for a file.
F6	Stop / Start Scroll Down	Show Prompt	Displays the file you are currently working on.
F7	Go to top of prompt	New File	Create a new file for prompting.
F8	Go to end of prompt	Save File	Save the progress of your file.
F9/ cmd shift+up	Speed Down x10	Demonstration	Puts the software in demonstration mode.
F10/ cmd shift+dwn	Speed Up x10	Setup	Allows you to toggle the font and BG color.
F11/cmd+up	Speed Down	Exit	It will exit from the program.
F12/cmd+dwn	Speed Up		
Ctrl/cmd + O	Open File		
Ctrl/cmd + S	Save File		
Ctrl/cmd + H	Show / Hide Tool bar		
ESC	Close Prompt Window		
Up/Down Arrows	Speed Up/Down * Scroll Up/Down		
Mouse shortcuts:			
Left Click/ cmd+click	Stop / Start Scroll (Start when tool bar is hidden)		
Right Click/ ctrl+click	Show / Hide Tool bar		
Mouse Wheel	Speed Up/Down * Scroll Up/Down		

To change the color of the font simple enter the file that you want to prompt. Then highlight the word or letter and right click on the mouse and a color palette will appear.

* PrompterPro 3 supports both RTF files and Text files.

* For any additional questions about PrompterPro 3 please call us at 713-272-8822.



QUICKSTART GUIDE

PrompterPro 3

Teleprompting Software for PC

Supports Windows XP | Vista | 7 | 8

PrompterPro 3

PC Software Quickstart Guide

 
Installing PrompterPro 3 (PC version only)

1. Insert the CD into the CD Drive on your computer. (If your PC does not have a CD Drive, you can download the software at <http://ikancorp.com/productdetail.php?id=389>)
2. Open "My Computer" from your desktop.
3. Double-click on the "PrompterPro 3.x.x" CD icon.
4. Double-click on the "PC" folder, then double-click on the "PrompterPro 3" folder.
5. Double-click on "PrompterPro3.msi".
6. Follow the easy installation instructions.


Setting up PrompterPro 3

If this is your first time installing any version of PrompterPro 3 on your computer, you will be prompted to enter an activation key. You will find the activation key inside the CD case.

Software Interface

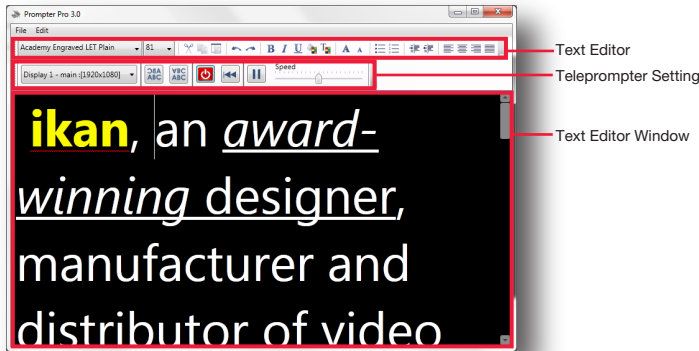


Text Editor Setting

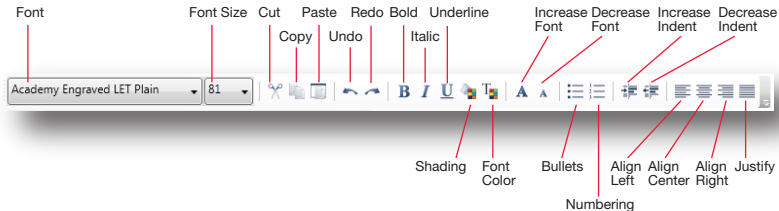 

PrompterPro 3

PC Software Quickstart Guide

 Teleprompter Setting

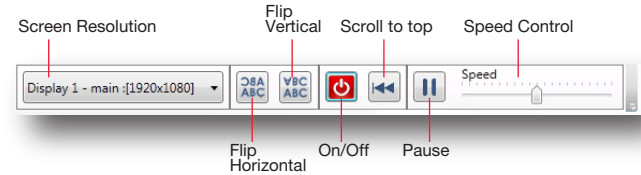

Text Editor Window

