

# QUICK START GUIDE / VH7-DK 7" HDMI LCD MONITOR Deluxe Kit

## INTRODUCTION

Thank you for purchasing the ikan VH7-DK Monitor. We know that you will be satisfied with our "V" series monitors. Please visit [www.ikancorp.com](http://www.ikancorp.com) for more information on our current and future products including our award-winning fluorescent studio lights and light accessories.

 
## PACKAGE INCLUDES

- VH7 LCD Monitor
- AC Power Adapter
- Camera Shoe Mount
- VGA Cable
- Remote Control
- 2 x Composite Female RCA Cable
- DV Battery (check one)  
[ Sony ] [ Canon ] [ Panasonic ]
- DV Battery Plate
- DV Battery Charger





## MONITOR DIAGRAMS

Front view

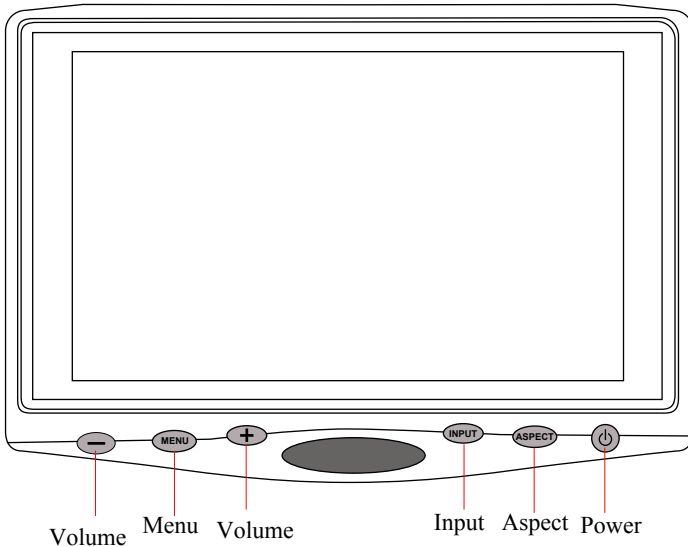

Back view

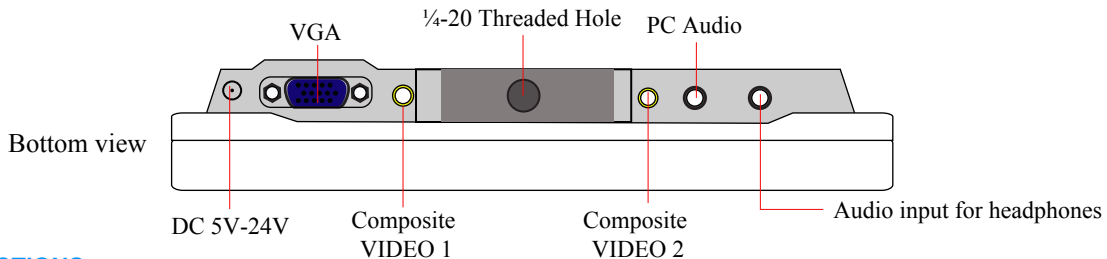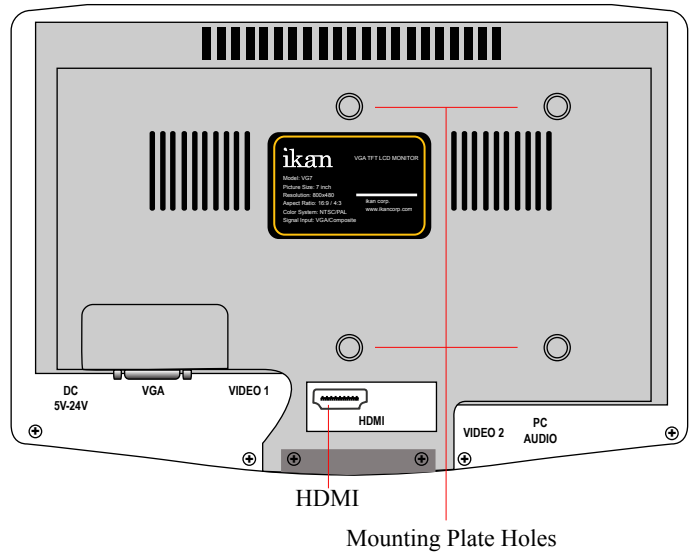  

## BUTTON FUNCTIONS

- |   |   |
|---|---|
| <p><b>1 Volume Buttons</b><br/>Decreases and increases volume as well as toggle through menu.</p> <p><b>2 Menu Button</b><br/>It is to display brightness, contrast, phase, clock, H position, V position, language, auto, reset, volume, exit.</p> <p><b>3 Input Button</b><br/>Video selection switch AV1, AV2, VGA, HDMI</p> | <p><b>4 ASPECT Selection Button</b><br/>Aspect: 16:9, 4:3, Full</p> <p><b>5 Power Button</b><br/>Turns monitor on and off</p> |
|---|---|

## CONDITIONS OF WARRANTY SERVICE

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period has expired.

Free Service will not be Provided in the Following Situations: (\* Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors etc.