## INTRODUCTION

 
Thank you for purchasing the ikan VH7e-DK Deluxe Kit. We know that you will be satisfied with our "V" series monitors. Please visit www.ikancorp.com for more information on our current and future products including our award-winning fluorescent studio lights and light accessories.

Sony "L" Series

Canon "900" Series

Panasonic "D54" Series


# PACKAGE INCLUDES





## **MONITOR DIAGRAMS**



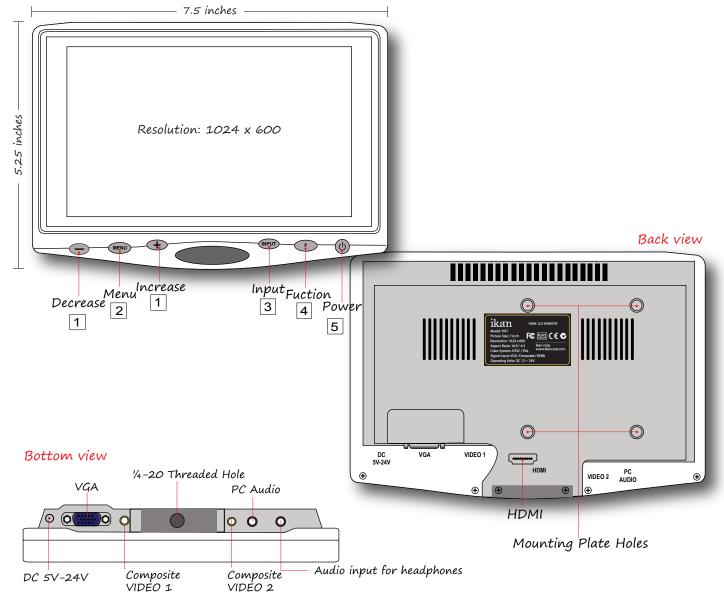

### **CONFIGURATION OF SETTING MENUS**

CONFIGURATION OF SETTING MENUS
GUIDES
Guides Full
Off
Mode 1
Mode 2
Mode 3
Guides 4:3
Off
Mode 1
Mode 2
G. Background (Changes the opacity of the areas outside the guides)
Normal Half
Black
Crosshair (Places a crosshair in the center of the image)
On
Off
Return
VIDEO CONFIG. Contrast [0 - 100]
Contrast [0 - 100] Brightness [0 - 100]
Tint [0 - 100]
Chroma [0 - 100]
Sharpness [0 - 100]
RGB Setup (Allows you to individually Adjust Color Values)
User R [0 - 255]
User G [0 - 255]
User B [0 - 255]
Offset R [0 - 255]
Offset G [0 - 255]
Offset B [0 - 255]
Return
SYSTEM CONFIG.
Menu Duration [5 -60]
Menu Setup (Saves 5 User Menu Presets)
User 1
User 2
User 3
User 4
User 5
Reset
Return
PC SETUP (These options for when using VGA input)
H – Positon [0 - 100]
V – Position [0 - 100]
Clock [0 - 100]
Phase [0 - 100]
Auto Adjust
Return

### **CONFIGURATION OF SETTING MENUS**

#### FUNCTION SETUP

Check Field (Allows you to view only certain color channels of the video signal.) Off

Blue

Red

Green

Mono

## Peaking Filter (A filter used to help you focus. It outlines the edges of items in focus with a red color.) Off

On

Aspect

### Full

Func. Set (Allows you to set one of the functions to the Function button on the front of the monitor) Check Field Peaking Filter

Aspect Guides Crosshair

Return

EXIT

## **BUTTON FUNCTIONS**

**1** Volume Buttons Decreases and increases volume aswell as toggle through menu.

#### 2 Menu Button

It is to display brightness, contrast, phase, clock, H position, V position, language, auto, reset, volume, exit.

#### 3 Input Button

Video selectionswitch AV1, AV2, VGA, HDMI

4 Function Button

Allows you to set one of the functions to the Function button on the front of the monitor

5 **Power Button** Turns monitor on and off

#### **CONDITIONS OF WARRANTY SERVICE**

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period has expired.

Free Service will not be Provided in the Following Situations: (\*\* Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors etc.