

# QUICK START GUIDE / VH7e HDMI LCD MONITOR



## INTRODUCTION


Thank you for purchasing the ikan VH7e HDMI LCD Monitor. We know that you will be satisfied with our "V" series monitors. Please visit [www.ikancorp.com](http://www.ikancorp.com) for more information on our current and future products including our award-winning fluorescent studio lights and light accessories.

## PACKAGE INCLUDES

- |   |                                  |                        |
|---|----------------------------------|------------------------|
| <input type="checkbox"/> VH7e Monitor                   | <input type="checkbox"/> BP2T-S  | Sony "L" Series        |
| <input type="checkbox"/> AC Power Adapter               | <input type="checkbox"/> BP2T-SU | Sony "BP-U" Series     |
| <input type="checkbox"/> Camera Shoe Mount              | <input type="checkbox"/> BP2T-C  | Canon "900" Series     |
| <input type="checkbox"/> DV Battery Plate (Check One)   | <input type="checkbox"/> BP2T-E6 | Canon 5D               |
| <input type="checkbox"/> 2 x Composite Female RCA Cable | <input type="checkbox"/> BP2T-P  | Panasonic "D54" Series |



## MONITOR DIAGRAMS

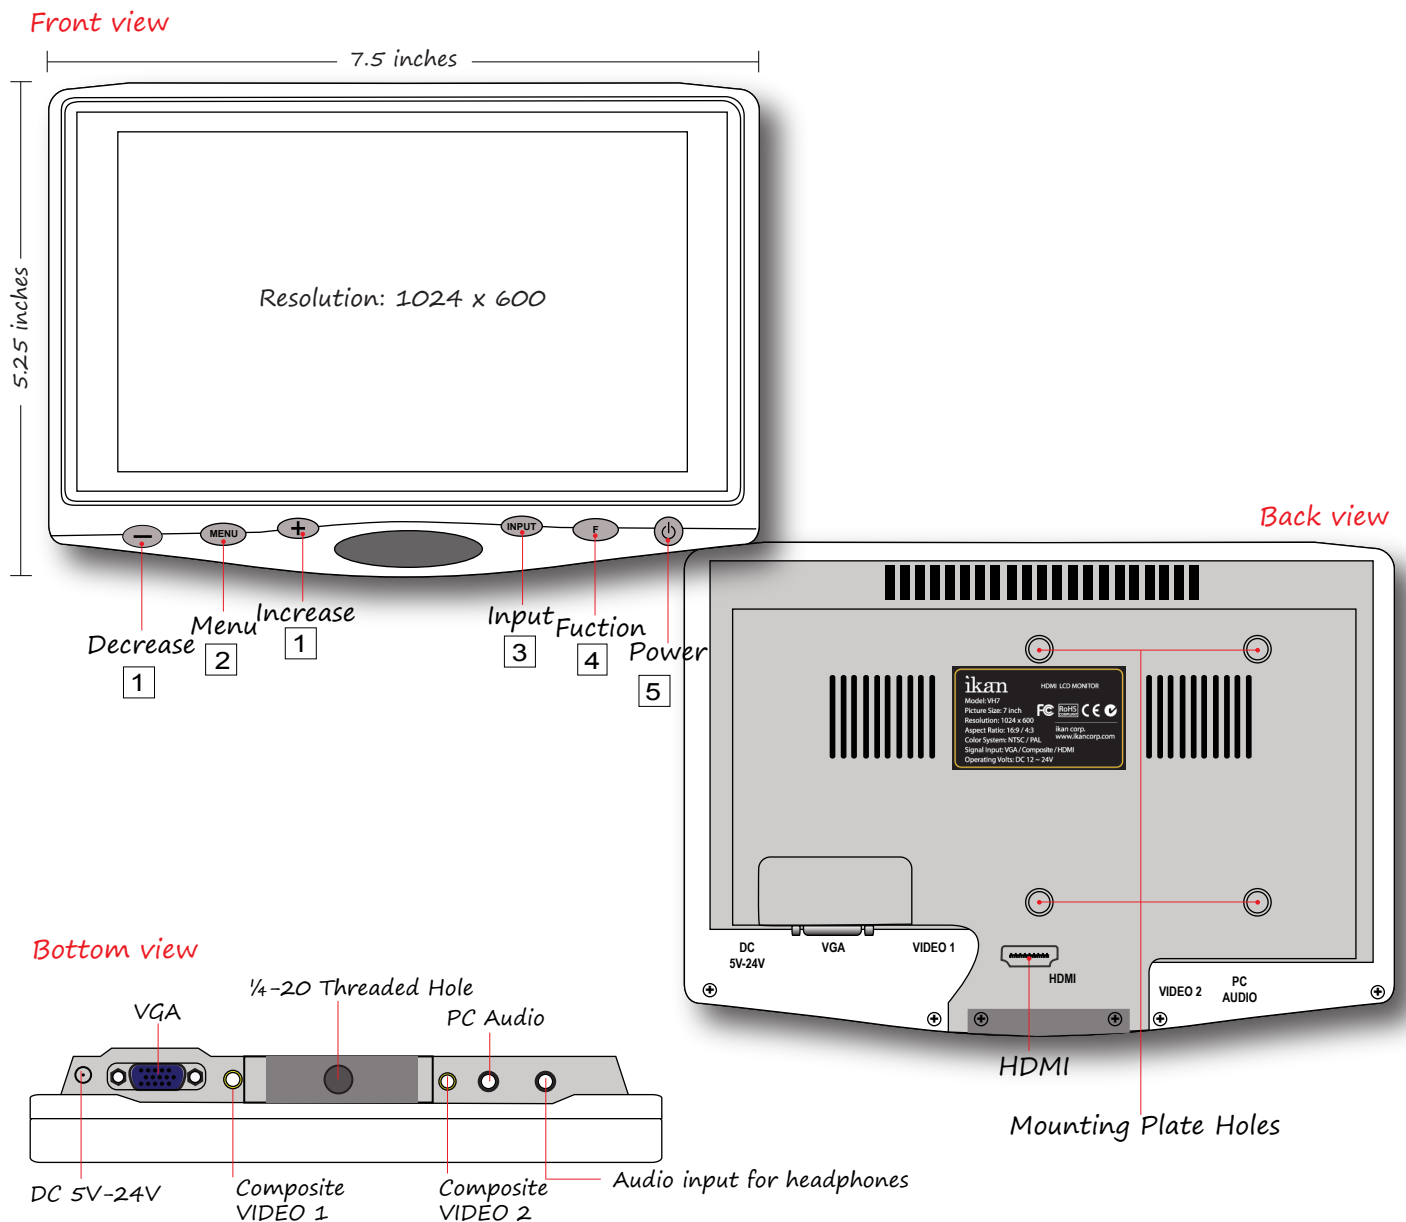

## CONFIGURATION OF SETTING MENUS

### GUIDES

- Guides Full
  - Off
  - Mode 1
  - Mode 2
  - Mode 3
- Guides 4:3
  - Off
  - Mode 1
  - Mode 2
- G. Background (Changes the opacity of the areas outside the guides)
  - Normal
  - Half
  - Black
- Crosshair (Places a crosshair in the center of the image)
  - On
  - Off
- Return

### VIDEO CONFIG.

- Contrast [0 - 100]
- Brightness [0 - 100]
- Tint [0 - 100]
- Chroma [0 - 100]
- Sharpness [0 - 100]
- RGB Setup (Allows you to individually Adjust Color Values)
  - User R [0 - 255]
  - User G [0 - 255]
  - User B [0 - 255]
  - Offset R [0 - 255]
  - Offset G [0 - 255]
  - Offset B [0 - 255]
- Return

### SYSTEM CONFIG.

- Menu Duration [5 -60]
- Menu Setup (Saves 5 User Menu Presets)
  - User 1
  - User 2
  - User 3
  - User 4
  - User 5
- Reset
- Return

### PC SETUP ( These options for when using VGA input)

- H – Positon [0 - 100]
- V – Position [0 - 100]
- Clock [0 - 100]
- Phase [0 - 100]
- Auto Adjust
- Return

## CONFIGURATION OF SETTING MENUS

### FUNCTION SETUP

Check Field (Allows you to view only certain color channels of the video signal.)

- Off
- Blue
- Red
- Green
- Mono

Peaking Filter (A filter used to help you focus. It outlines the edges of items in focus with a red color.)

- Off
- On

Aspect

- Full

Func. Set (Allows you to set one of the functions to the Function button on the front of the monitor)

- Check Field
- Peaking Filter
- Aspect
- Guides
- Crosshair

Return

EXIT

## BUTTON FUNCTIONS

- |  |   |
|--|---|
| <p><b>1 Volume Buttons</b><br/>Decreases and increases volume aswell as toggle through menu.</p> <p><b>2 Menu Button</b><br/>It is to display brightness, contrast, phase, clock, H position, V position, language, auto, reset, volume, exit.</p> <p><b>3 Input Button</b><br/>Video selection switch AV1, AV2, VGA, HDMI</p> | <p><b>4 Function Button</b><br/>Allows you to set one of the functions to the Function button on the front of the monitor</p> <p><b>5 Power Button</b><br/>Turns monitor on and off</p> |
|--|---|

## CONDITIONS OF WARRANTY SERVICE

- Free service for one year from the day of purchase if the problem is caused by manufacturing errors.
- The components and maintenance service fee will be charged if the warranty period has expired.

Free Service will not be Provided in the Following Situations: (\*\* Even if the product is still within the warranty period.)

- Damage caused by abuse or misuse, dismantling, or changes to the product not made by the company.
- Damage caused by natural disaster, abnormal voltage, and environmental factors etc.