


Access WebGUI via light fixture's IP address. Example if light is 192.168.1.130 enter that address into web browser.


Default Password = admin

(Password only available from version 1.2.0 and up)

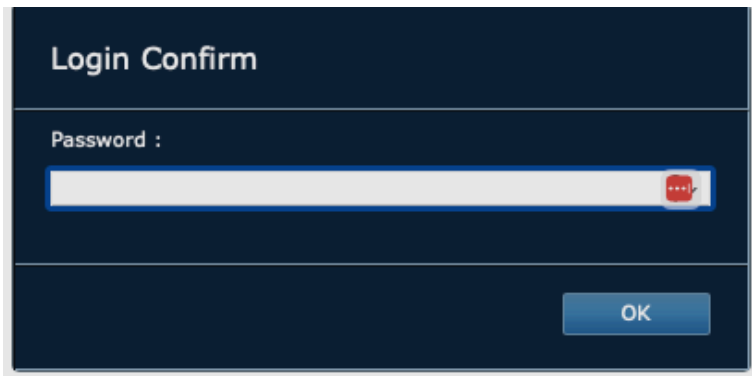

A dark-themed dialog box titled "Login Confirm". It contains a label "Password :" followed by a text input field with a red eye icon for toggling visibility. At the bottom right is an "OK" button.

Go to Upgrade and choose the firmware file downloaded from [ikancorp.com](http://ikancorp.com). File should be unzipped with a format of .enc

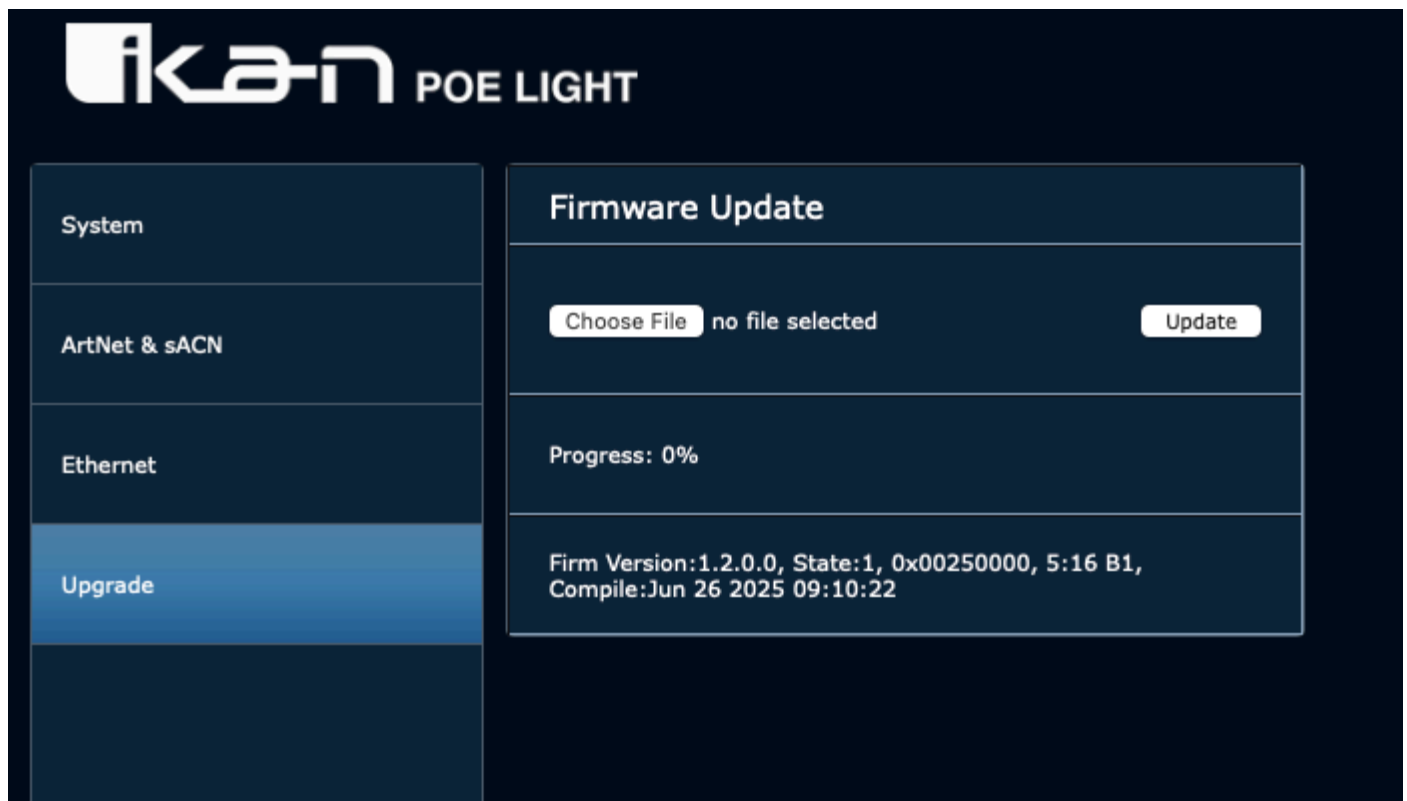

The main WebGUI interface for the PoE Light. The header shows the "ikan POE LIGHT" logo. On the left is a sidebar menu with options: System, ArtNet & sACN, Ethernet, Upgrade (highlighted in blue), and an empty section at the bottom. The main content area is titled "Firmware Update" and includes a "Choose File" button, the text "no file selected", and an "Update" button. Below this is a "Progress: 0%" indicator. At the bottom, it displays the current firmware details: "Firm Version:1.2.0.0, State:1, 0x00250000, 5:16 B1, Compile:Jun 26 2025 09:10:22".