




# PT-PEDAL

Teleprompter Foot Control Pedal

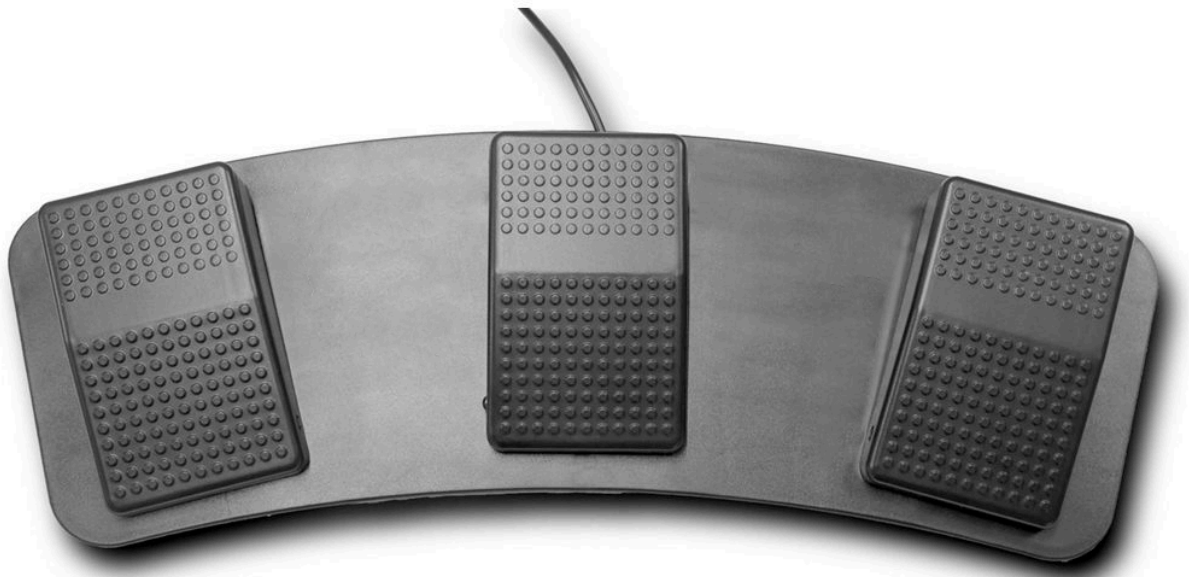

## User Manual

**Read this manual carefully before using  
the PT-PEDAL**

Version 1.0

Product Overview	3
What's Included	3
Specifications	3
Setup Instructions	4
Operating Instructions	4
Maintenance and Care	5
Troubleshooting	5
Important Safety Information	5

## **Ikan Corporation**

Website: [www.ikancorp.com](http://www.ikancorp.com)

Phone: (713) 272-8822

Email: [support@ikancorp.com](mailto:support@ikancorp.com)

Address: 10207 S Sam Houston Pkwy W, Suite 140, Houston, TX 77071

## Product Overview

The Teleprompter Foot Control Pedal is a wired USB controller that connects to your computer to manage teleprompter scripting sessions. It features three pedals for intuitive control:

**Center Pedal:** Starts or stops the script scrolling.

**Left Pedal:** Decreases the scroll speed.

**Right Pedal:** Increases the scroll speed.

## What's Included

- **1x** Teleprompter Foot Control Pedal (with integrated 5 ft. USB Type-A cable)
- **3x** Pedal Sound Dampeners (Pre-installed)

## Specifications

**Build Material:** Plastic

**Product Dimensions:** 0.78 x 3.1 x 7.9 inches (2 x 8 x 20 cm)

**Shipping Weight:** 2 lbs

**Shipping Dimensions:** 18 x 18 x 4 inches

**Connection:** USB Type-A (5 ft. cable length)

**Compatible Systems:** Microsoft Windows 11, 10, 8, or 7

**Software Compatibility:** Ikan Prompter Pro 4 (or compatible versions)

**UPC Code:** 847983033041

## Setup Instructions

### 1. Unpack the Device:

- Remove the Teleprompter Foot Control Pedal from its packaging and inspect for any damage.

### 2. Position the Pedal:

- Place the pedal on a flat, stable surface near your workstation. The curved design allows for flexible placement based on your preferred foot (left or right).

### 3. Connect to Your Computer:

- Plug the USB Type-A end of the 5 ft. cable into an available USB port on your computer.
- No additional drivers are required; the device is plug-and-play.

### 4. Install/Launch Software:

- Ensure Ikan's Prompter Pro 4 software is installed on your Windows computer.
- Launch the software and load your teleprompter script.

## Operating Instructions

### 1. Starting a Session:

- Open your script in Prompter Pro 4.
- Press the Center Pedal to start scrolling.

### 2. Adjusting Scroll Speed:

- Press the Left Pedal to slow down the scrolling speed.
- Press the Right Pedal to increase the scrolling speed.
- Hold the pedals for continuous adjustment, or tap for incremental changes.

### 3. Pausing/Stopping:

- Press the Center Pedal again to pause or stop the scrolling.

### 4. Best Practices:

- Use on a non-slip surface to prevent movement during operation.
- Test the pedals in a practice session to familiarize yourself with the sensitivity and response.
- For extended use, ensure the cable is routed to avoid tripping hazards.

The pedal controls are responsive and allow you to set your own pace without interrupting your presentation.

## Maintenance and Care

**Cleaning:** Wipe the pedal with a soft, dry cloth. Avoid using liquids or abrasive cleaners, as they may damage the plastic housing or electronics.

**Storage:** Store in a cool, dry place away from direct sunlight. Coil the cable loosely to prevent kinks.

**Cable Management:** Inspect the 5 ft. USB cable regularly for wear. Do not pull or twist the cable excessively.

The sound dampeners can be replaced if they wear out; contact Ikan for replacements.

---

## Troubleshooting

### No Response from Pedals:

- Ensure the USB cable is securely connected to both the pedal and computer.
- Try a different USB port.
- Restart the Prompter Pro software and your computer.

### Software Not Detecting Pedal:

- Confirm you are using a compatible Windows version (7, 8, 10, or 11).
- Reinstall Prompter Pro 4 if necessary.

## Important Safety Information

- Use only on flat, stable surfaces to avoid slipping or tipping.
- Do not expose to water, extreme heat, or humidity.
- Keep away from children and pets to prevent accidental damage.
- This product is intended for indoor use in professional settings; avoid outdoor or harsh environments.
- For additional support, product updates, or warranty information, visit the Ikan website at [ikancorp.com](http://ikancorp.com) or contact their customer service team.

**ikan**