

Ikan Tally Interface for ATEM



Installation Guide

Package Contents

- 2x Tally Interface unit
- 1x Connection Y cable

Setup Instructions

Note

A Blackmagic GPI & Tally Interface is required for the Ikan Tally Interface to work

ATEM Connection

1. Locate the GPI output port on your Blackmagic GPI & Tally Interface
2. Connect the included cable from the Blackmagic GPI & Tally Interface's port to the Ikan tally interface's input port. Plug the cable labeled "1" into the Ikan tally interface you intend on using for cameras 1-4. Plug the cable labeled "2" into the Ikan tally interface you intend on using for cameras 5-8.

Monitor Connections

1. Connect your Ikan monitors using standard Ethernet cables
2. Up to 8 monitors can be connected to the RJ45 output ports

Operation

- The system operates in plug-and-play mode with no additional configuration required
- When a camera is selected on the ATEM, the corresponding monitor's tally light will illuminate red for Program

Important Notes

- Use only standard Ethernet cables for monitor connections
- Ensure all connections are secure before operation
- Only supports program (red) tally light functionality

For technical support, contact Ikan at 713.272.8822