

EV2 Deluxe Fly QUICKSTART GUIDE

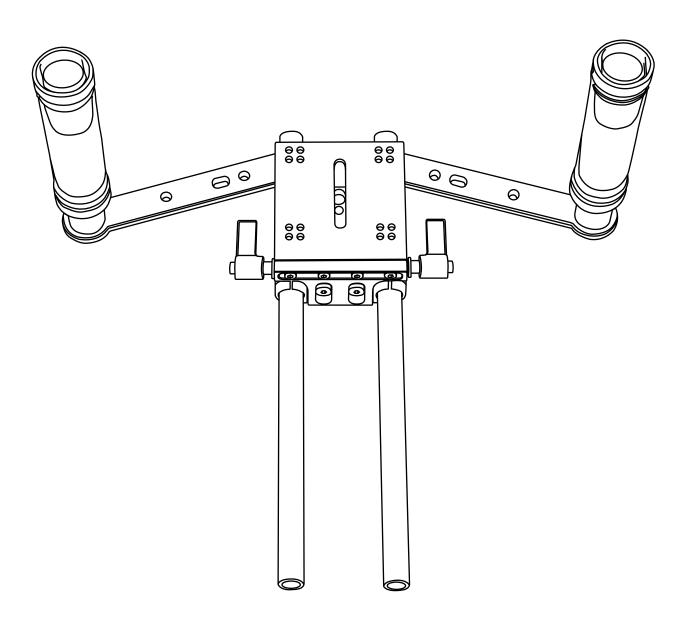


EV2 Deluxe Fly QUICKSTART GUIDE


What's included

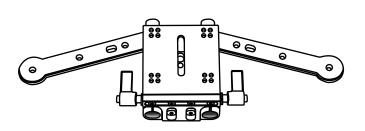

□ 1 x ELE-SBP, 2 x ELE-HDLX



☐ 2 x Handle Bar 200




□ 2 x ELE-15R12



☐ 1 x DRS-01



☐ 4 x 1/4-20-3/4 inch Socket Head Screw



☐ 1 x HEX KEY 2.5mm

□ 1 x HEX KEY 5/32 inch






EV2 Deluxe Fly QUICKSTART GUIDE

PRODUCT ASSEMBLY

Assembling your EV2 Deluxe Fly is quick and easy, since the majority of the rig has already been pre-assembled for you. (1) Secure the heavy duty Comfort Hand Grips to the Handle Arms, using the included 1/4-20 Hex Screws and tighten them with the Hex Key. (2) Next, insert the 12" Rods into the front Rod Mount of the Small Base Plate, slide them into desired position, and (3) tighten the Adjustable Thumb Screws to lock them in place.

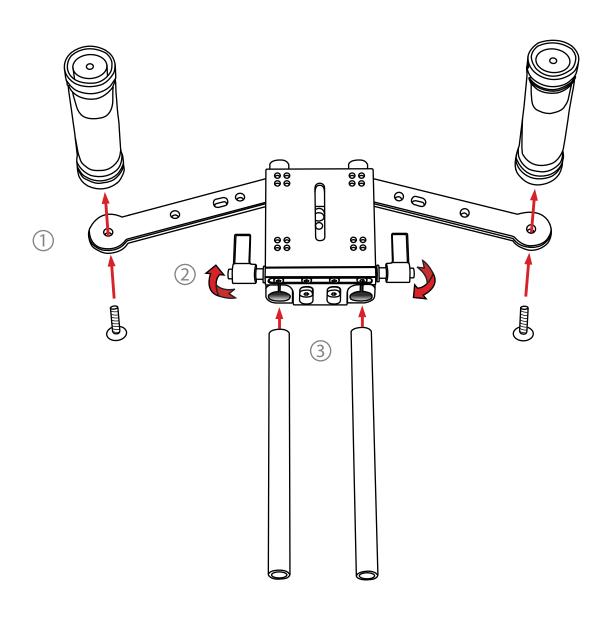




EV2 Deluxe Fly QUICKSTART GUIDE

ADJUSTMENT POINTS

Numerous Adjustment Points allow for precise positioning modifications to the Small Base Plate component of your EV2 Deluxe Fly Kit. Loosen Thumb Screws to move 12" Rods forward/backwards to desired position. Loosen front Hex Screws to make vertical/horizontal adjustments to base plate.

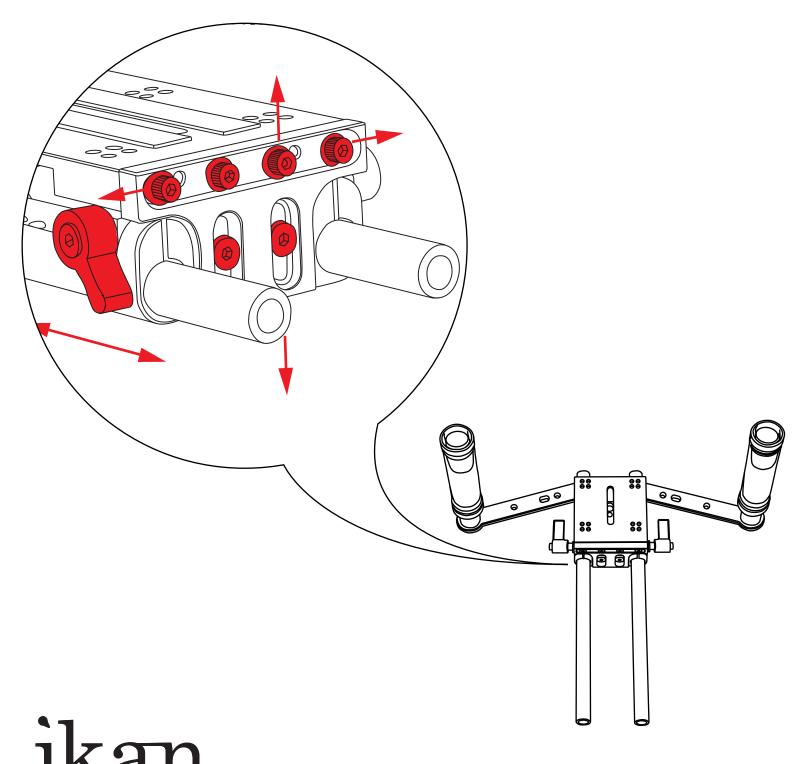


EV2 Deluxe Fly QUICKSTART GUIDE

MOUNTING POINTS

The EV2 Deluxe Fly contains numerous 1/4-20 threaded mounting points, designed with plenty of space in between to comfortably fit all of your accessories, such as a field monitor, on-camera light, and audio solutions.

Screw thread size

\(\rightarrow\) 1/4-20

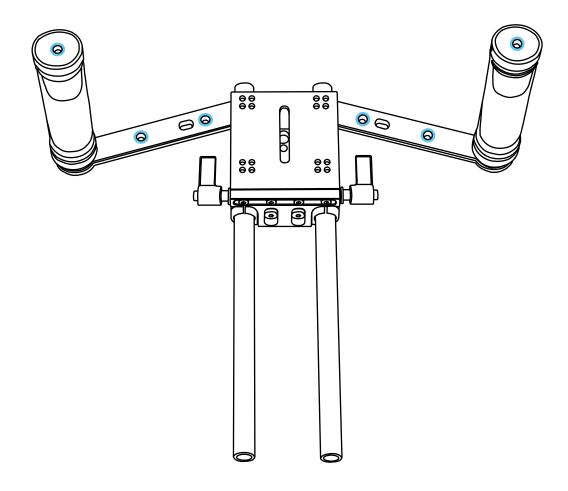




EV2 Deluxe Fly QUICKSTART GUIDE

SKID PLATE ATTACHMENT POINTS

There are a total of four threaded attachment points for your skid plate; two 3/8-16 and two 1/4-20 threaded holes for you to chose from. Simply tighten the screw from your skid plate into the appropriate hole for easy mounting and unmounting from your tripod's quick release.

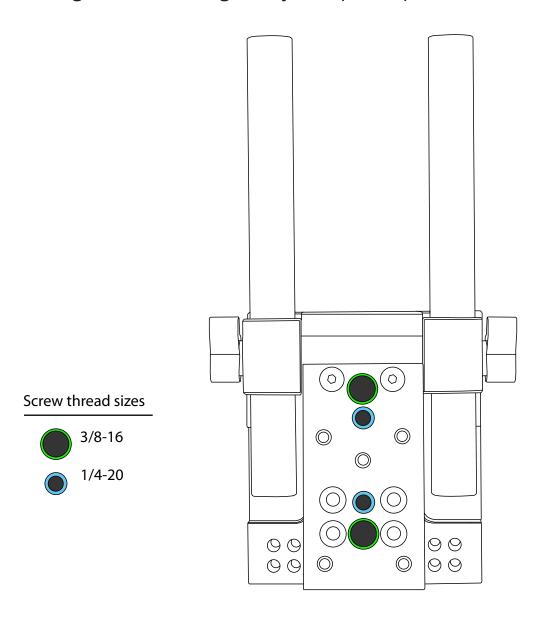

*Bottom View



EV2 Deluxe Fly QUICKSTART GUIDE

MOUNTING YOUR CAMERA

Loosen the thumb screw and slide out one of the 12" rods, in order to gain access to easily fit your hand underneath the top portion of the small base plate. Next, take the D-Ring and slide it through the opening. Allign the 1/4-20 threaded hole on the bottom of your camera with the D-Ring and tighten until your camera is secure. Finally, slide the 12" rod back to it's original position and tighten the thumb screw.

