

SUPPORT YOUR IMAGE

NINGBO EIMAGE STUDIO EQUIPMENT CO., LTD

Address:No.1230 South Cihai Rd,Luotuo Industry zone,Zhenhai,Ningbo, China,315202

Tel:86-0574-55681753,86-0574-55681675

Fax:0574-86590078 E-mail: sales@eimagevideo.com


Visit www.eimagevideo.com for more information





Dollies Manual

V1.0 2020.03

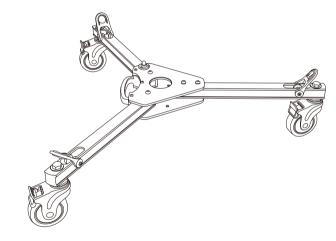

----- www.eimagevideo.com ------

Packing list


Contents

Packing List	02
Individual	03
EI-7003 & 7003C	05
EI-7004 & 7004B & 7004C	09
EI-7005 & 7005B	13
EI-7006 & 7007	15
Warranty Card	18

In order to provide quick and smooth movement for the tripods, E-IMAGE supplies kinds of dollies, with different payload super study. Individually braked wheels; some with cable guards. Folds for easy transporting.

In The Box

Let's take EI-7004 for example

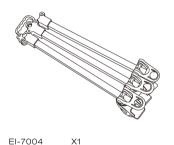




User Guide

X1

Prepare The Dolly

Pull the knob or press the lock pin, slowly open the dolly leg until the pin hits the leg fixing hole. If the leg is opened abruptly, fingers can get caught and cause injury. Check that all lock pins are through the leg fixing holes.



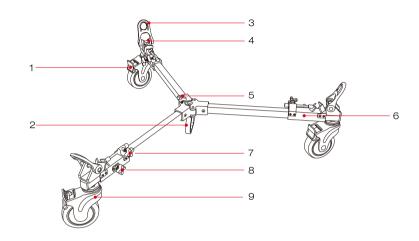

EI-7003/7003C/7004/7004B/7004C

1.Caster lock lever 2. Carrying handle

3.Leg band


4. Tripod leg holder 5.Leg fixing hole

6.Locking slider

7. Knob to adjust the position of the Locking slider

8. Knob to adjust the lock lever for the tripod foot

9.Caster

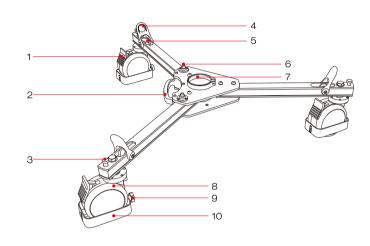

EI-7005/7005B/7006/7007

6.Leg fixing hole 1.Caster lock lever 2. Carrying handle 3.Position knob 8.Caster


4.Leg band 5. Tripod fixing hole 7.Column entrance

9.Cable guard lock knob 10.Cable guard



EI-7003 & 7003C


Model	Net Weight	Footprint diameter	Safety Payload	Casters diameter
El-7003	3.5kg/7.7lbs	100cm/39.4in	40kg/88.2lbs	75mm/3.0in
El-7003C	3.9kg/8.6lbs	100cm/39.4in	40kg/88.2lbs	75mm/3.0in

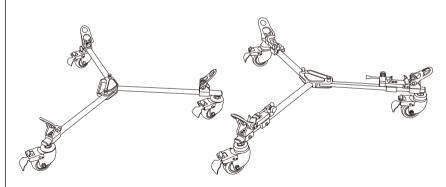

EI-7003

EI-7003C

Using

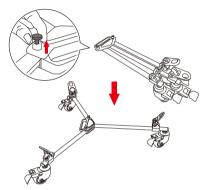

1 Pull the knob to extend the dolly. Steer Mode.

This operation suitable for El-7003, El-7003C.




Step on the independent brakes for locking the dolly in position. When moving the dolly under unlocking the brake pls hold the tripod or pedestal with your hand during operation.

This operation suitable for all E-IMAGE dollies.



Using

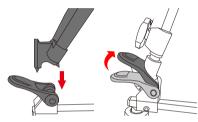


Attach the tripod or pedestal to the dolly. Please remove the camera from the tripod or pedestal before assemble the tripod to the dolly. Make sure that the leg bands at three positions are securely fixed.

This operation suitable for all E-IMAGE dollies.




4 Loose the knob in the anticlockwise direction to adjust the position of the locking slider.



El-7003C is a professional universal tripod dollywhich comes with fully adjustable leg locks to fit almost all full-sized tripods.

Using

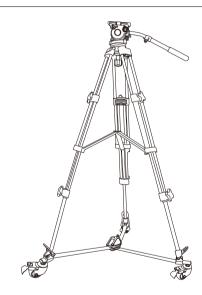


6 Unlock the casters when moving the dolly. Hold and control the tripod or pedestal with your hand during operation.



EI-7004 & 7004B


Model	Net Weight	Footprint diameter	Safety Payload	Casters diameter
EI-7004	3.2kg/7.0lbs	100cm/39.4in	60kg/132.3lbs	100mm/4.0in
EI-7004B	6.8kg/15.0lbs	100cm/39.4in	60kg/132.3lbs	100mm/4.0in

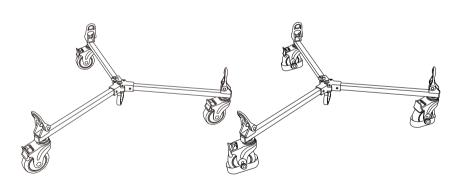

EI-7004 EI-7004B

EI-7004C

Model	Net Weight	Footprint diameter	Safety Payload	Casters diameter
EI-7004C	3.6kg/7.9lbs	100cm/39.4in	60kg/132.3lbs	100mm/4.0in

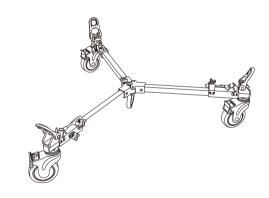


EI-7004C






Using

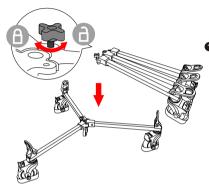


• Rotate the knob in the anticlockwise direction to extend the dolly.

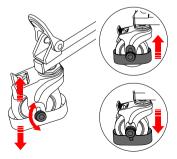


2 Loose the knob in the anticlockwise direction to adjust the height of the cable guard.


This operation suitable for El-7004B dolly.


Using

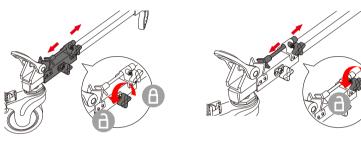

6 Loose the knob in the anticlockwise direction to adjust the position of the locking slider.










EI-7005 & 7005B


Model	Net Weight	Footprint diameter	Safety Payload	Casters diameter
El-7005	6.8kg/15.0lbs	100cm/39.4in	100kg/220.5lbs	100mm/4.0in
El-7005B	7.0kg/15.4lbs	100cm/39.4in	100kg/220.5lbs	100mm/4.0in

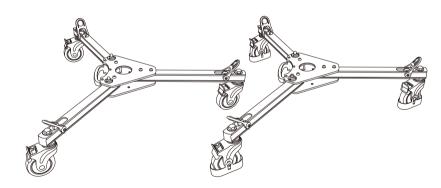

EI-7005

EI-7005B

Using

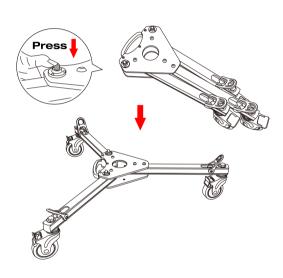

1 Press the locking pin to release and extend the dollies.


This operation suitable for El-7005,7005B,7006,7007





EI-7006 & 7007


Model	Net Weight	Footprint diameter	Safety Payload	Casters diameter
El-7006	7.0kg/15.4lbs	100cm/39.4in	100kg/220.5lbs	100mm/4.0in
El-7007	10.7kg/23.6lbs	100cm/39.4in	100kg/220.5lbs	125mm/5.0in

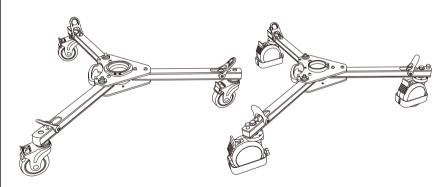

EI-7006

EI-7007

Using

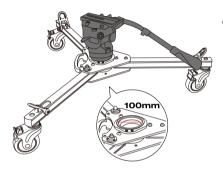

100mm heads.

This operation Suitable for El-7006.




Rotate the knob in anticlockwise direction to fix into different holes to achieve directional movement.

This operation suitable for El-7007.





Using

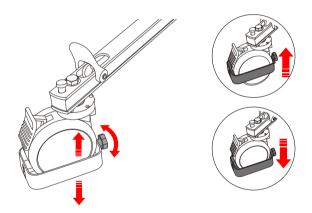

S Loose the knob in the anticlockwise direction to adjust the height of the cable guard.

This operation suitable for El-7007 dolly.

Customer Information

Customer Name	Contact No.
Address	

Sales Manager

Sales Date	Dealer
Dealer Contact No.	

#1 Maintenance Record

Service Date			Signatur	e of Repairman
Cause of Probler	m			
Service Result:	Solved		Jnsolved	Refunded/ Replaced

^{*} Contents are subject to change without prior notice, you can download the latest version from **www.elmagevideo.com**.

